


5. Front Speaker S901466

A: REMOVAL S901466A18

- 1) Disconnect ground cable from battery.
- 2) Remove front door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 3) Remove front speaker mounting screws.

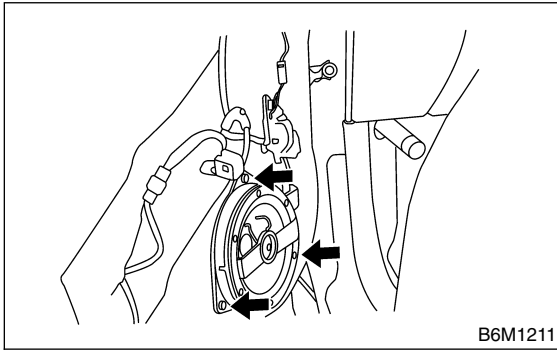

- 4) Disconnect harness connector and remove front speaker.

B: INSTALLATION S901466A11

Install in the reverse order of removal.