


3. Front Under Cover S911372

A: REMOVAL S911372A18

- 1) Lift-up the vehicle.
- 2) Loosen bolts and clips to remove under cover.

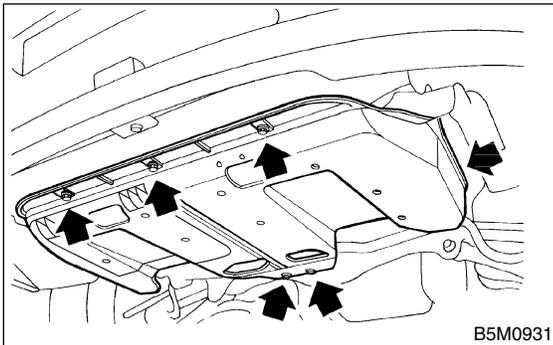

B: INSTALLATION S911372A11

Install in the reverse order of removal.

Tightening torque:

18.4 N·m (1.88 kgf·m, 13.6 ft·lb)