

# REAR BUMPER

Exterior/Interior Trim

## 5. Rear Bumper S911370


### A: REMOVAL S911370A18

#### 1. SEDAN S911370A1801


##### CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.
- To avoid damage to bumper, lay removed bumper on sheet spread on the floor. Do not lay it directly on the floor.


- 1) Lift-up the vehicle.
- 2) Remove bolts and clips.

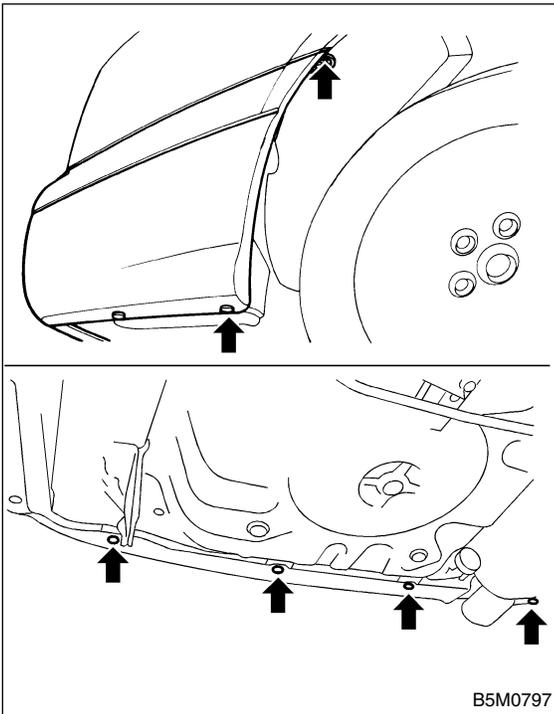


- 3) Loosen clips to remove trunk rear trim.

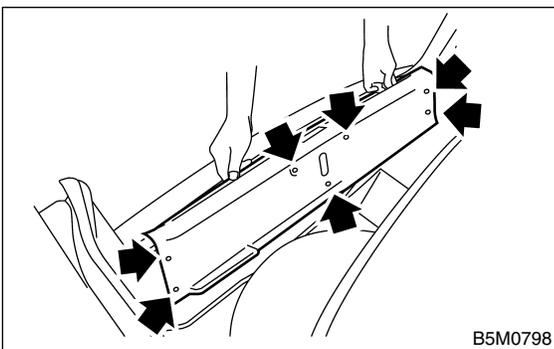


- 4) Remove hook (A) to pull off rear side of trunk side trim.

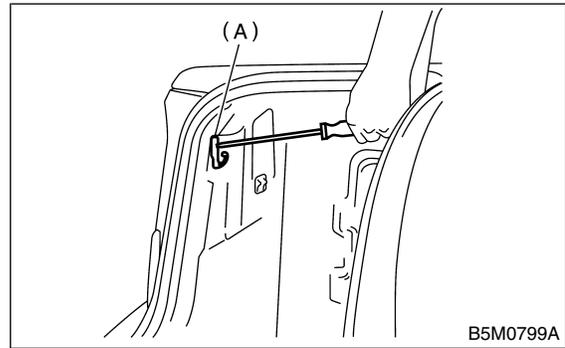


- 5) Remove two nuts from each side to remove rear bumper.

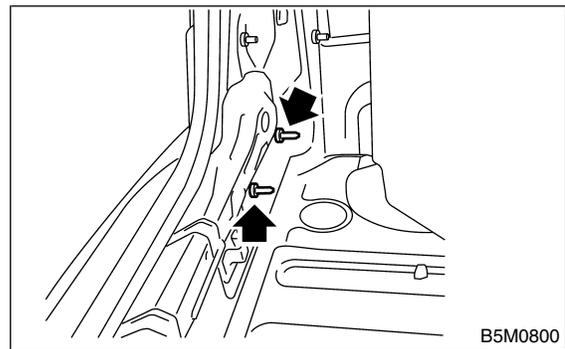

- 6) Loosen clips to remove upper beam (A) from bumper face.

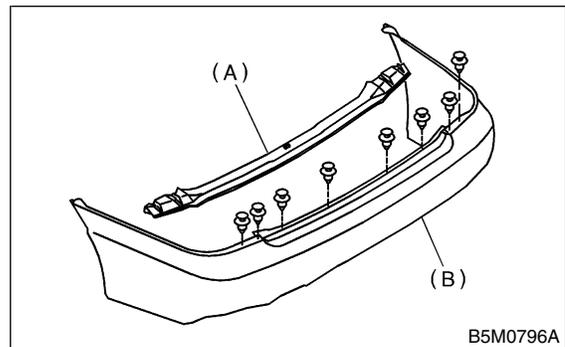

- 7) Remove resin beam.

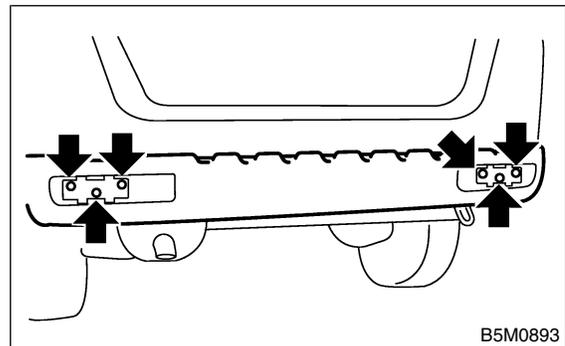


## 2. WAGON S911370A1802


### CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.
- To avoid damage to bumper, lay removed bumper on sheet spread on the floor. Do not lay it directly on the floor.


- 1) Lift-up the vehicle.
- 2) Remove trailer hitch. <Ref. to EI-31, REMOVAL, Trailer Hitch.>
- 3) Remove bolts and clips.

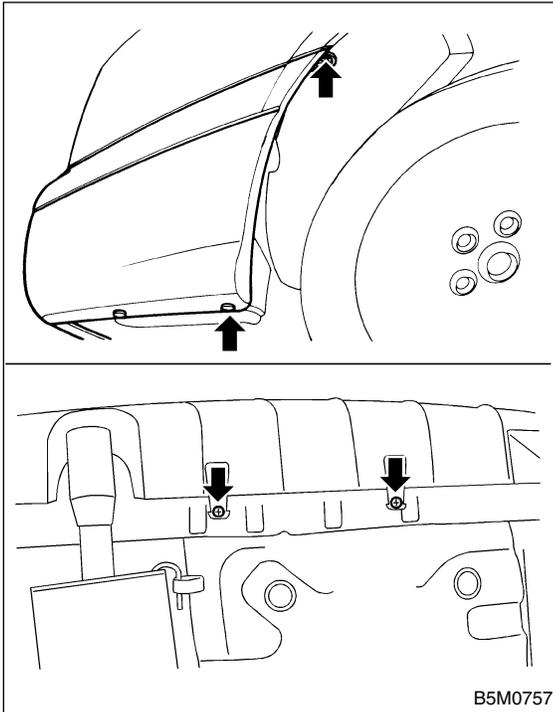


- 4) Remove rear floor box. <Ref. to EI-44, REMOVAL, Rear Quarter Trim.>
- 5) Pull off rear end of rear quarter lower trim to remove cap.

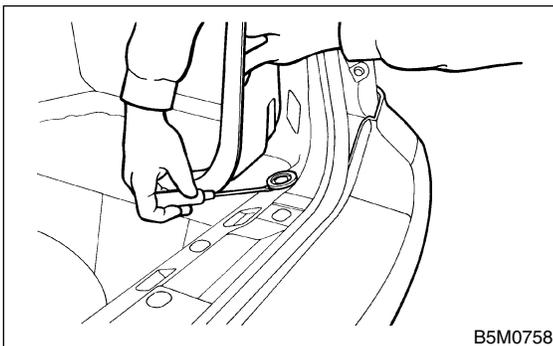


- 6) Loosen bolts to remove rear bumper.

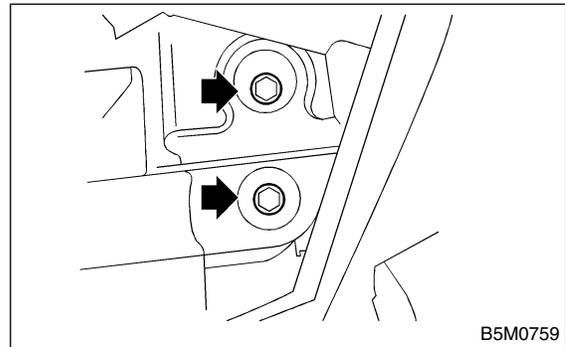

- 7) Loosen clip (A) to remove bumper beam (B) from rear bumper face (C).

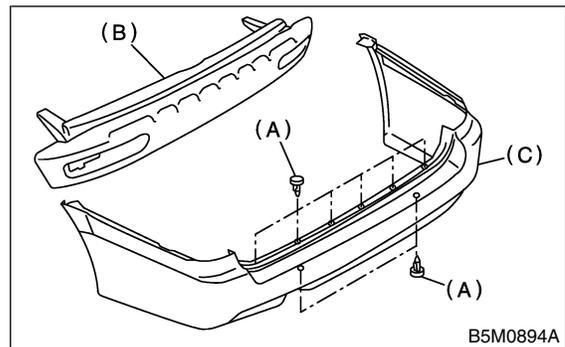

- 8) Remove resin beam from bumper beam.

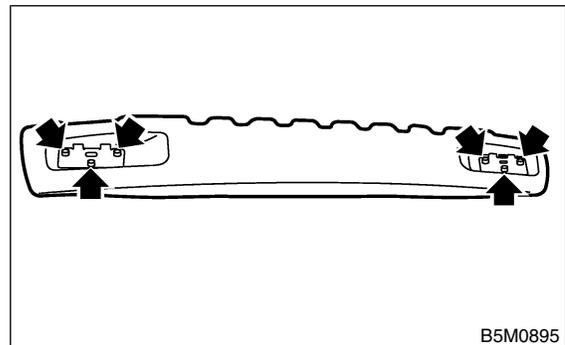

# REAR BUMPER

Exterior/Interior Trim

## B: INSTALLATION

S911370A11


### 1. SEDAN

S911370A1101

#### CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.

- 1) Install in the reverse order of removal.
- 2) Fit slider (A) to guide pin (B) securely.

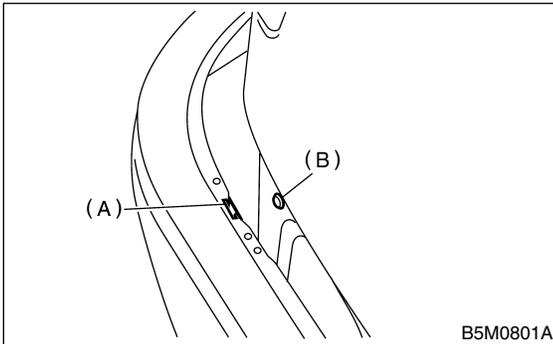


### 2. WAGON

S911370A1102

#### CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.

- 1) Install in the reverse order of removal.
- 2) Fit slider (A) to guide pin (B) securely.

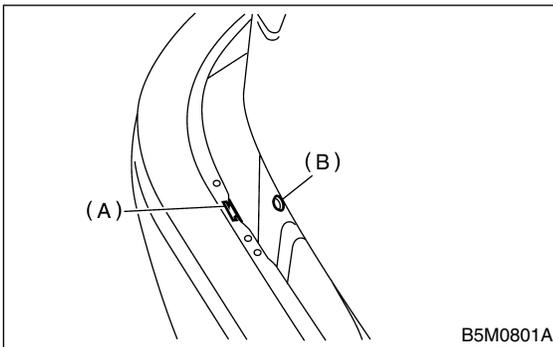

#### Tightening torque:

Refer to **COMPONENT** in **General Description**. <Ref. to EI-3, **REAR BUMPER (SEDAN)**, **COMPONENT, General Description**.>

## C: REPAIR

S911370A19

Refer to front bumper repair. <Ref. to EI-15, REPAIR, Front Bumper.>