



15. Inner Rearview Mirror S905340

A: REMOVAL S905340A18

1) Turn mirror base 90 degrees clockwise or counterclockwise to remove it.

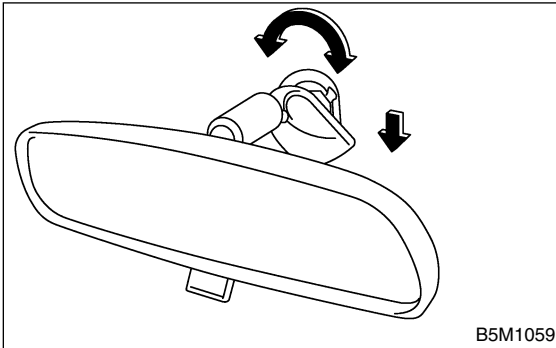

2) Remove spring from mirror base.

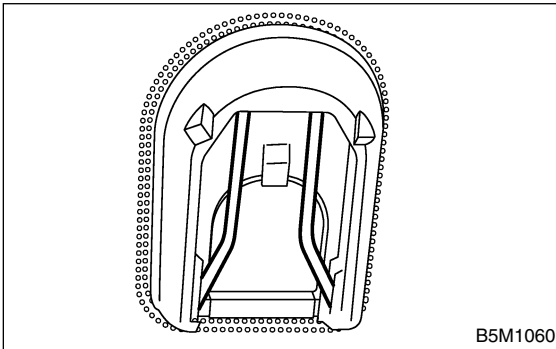

CAUTION:
Be careful not to damage the mirror surface.

B: INSTALLATION S905340A11

Install in the reverse order of removal.

C: INSPECTION S905340A10

Do not let mirror be damaged.
Do not let spring deteriorate.