


REAR REGULATOR AND MOTOR ASSEMBLY

Glass/Windows/Mirrors


9. Rear Regulator and Motor Assembly S905451

A: REMOVAL S905451A18


- 1) Remove door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove door glass. <Ref. to GW-20, REMOVAL, Rear Door Glass.>
- 4) Secure bolts using screwdriver to remove front sash adjusting nut.

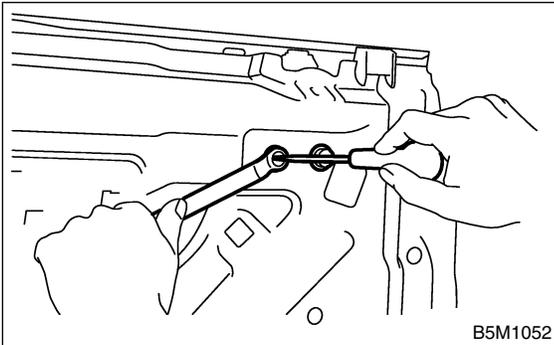

- 5) Remove front sash.
- 6) Disconnect electrical connector.
- 7) Loosen four bolts and two nuts to remove regulator assembly.

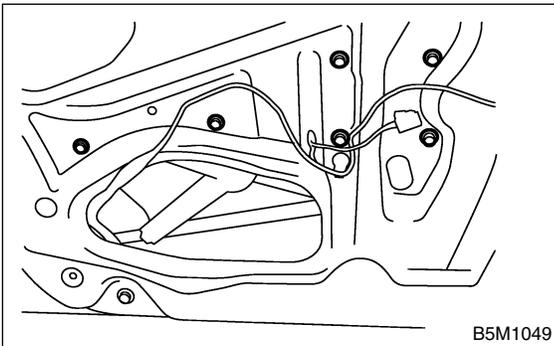

- 8) Loosen screws to remove motor assembly.

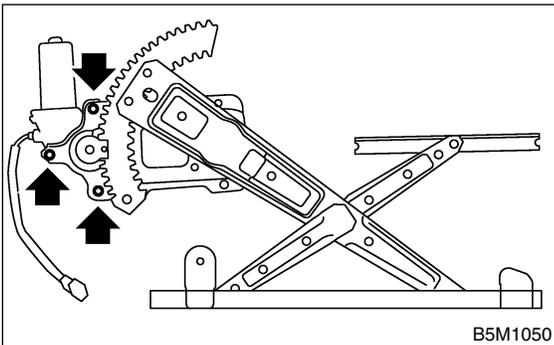

B: INSTALLATION S905451A11

- 1) Install in the reverse order of removal.
- 2) Adjust rear door glass. <Ref. to GW-20, ADJUSTMENT, Rear Door Glass.>

Tightening torque:

Refer to COMPONENT in General Description. <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION S905451A10

- 1) Make sure that power window motor rotates properly when battery voltage is applied to terminals of motor connector.
- 2) Change polarity of battery connections to terminals to ensure that motor rotates in reverse direction.