

GENERAL DESCRIPTION

Instrumentation/Driver Info

1. General Description S907001

A: SPECIFICATIONS S907001E49

Combination meter	Speedometer	Electric pulse type
	Temperature gauge	Thermistor cross coil type
	Fuel gauge	Resistance cross coil type
	Tachometer	Electric impulse type
	Turn signal indicator light	12 V — 1.4 W
	Charge indicator light	12 V — 1.4 W
	Oil pressure indicator light	12 V — 1.4 W
	ABS warning light	12 V — 1.4 W
	Check engine warning light (Malfunction indicator light)	12 V — 1.4 W
	HI-beam indicator light	12 V — 1.4 W
	Door open warning light	LED
	Seat belt warning light	LED
	Brake fluid and parking brake warning light	12 V — 1.4 W
	FWD indicator light	12 V — 1.4 W
	AIRBAG warning light	12 V — 1.4 W
	Meter illumination light	12 V — 3.4 W
	AT OIL TEMP. warning light	12 V — 1.4 W
	Security indicator light	LED
	Low fuel warning light	12 V — 1.4 W
	VDC warning light	12 V — 1.4 W
	VDC function indicator light	12 V — 3 W
VDC OFF indicator light	12 V — 1.4 W	
AT select lever position indicator light	12 V — 100 mA	
LCD back light	12 V — 1.4 W	

B: CAUTION S907001A03

- Be careful not to damage meters and instrument panel.
- Be careful not to damage meter glasses.
- Make sure that electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply excessive force to printed circuit.
- Do not drop or otherwise apply impact.

C: PREPARATION TOOL S907001A17

1. GENERAL TOOLS S907001A1701

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.