


8. Ambient Sensor S907644

A: REMOVAL S907644A18

- 1) Open front hood.
- 2) Disconnect ground cable from battery.
- 3) Disconnect ambient sensor connector.
- 4) Remove ambient sensor from radiator lower panel.

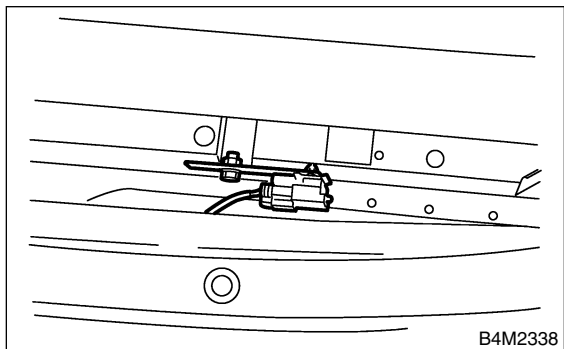


B: INSTALLATION S907644A11

Install in the reverse order of removal.

C: INSPECTION S907644A10

Measure ambient sensor resistance.

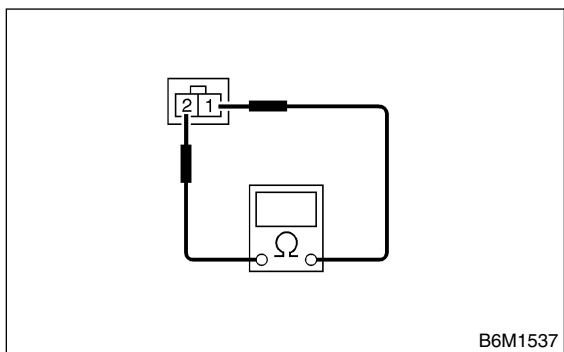

Terminal	Resistance
1 and 2	2.2 kΩ/25°C (77°F)

If NG, replace the ambient sensor.

AMBIENT SENSOR

Instrumentation/Driver Info

MEMO: