


8. Combination Switch (Light)


S914411

A: REMOVAL S914411A18

- 1) Disconnect ground cable from battery.
- 2) Remove instrument panel lower cover. <Ref. to EI-37, REMOVAL, Instrument Panel Assembly.>
- 3) Remove screws which secure upper column cover to lower column cover.

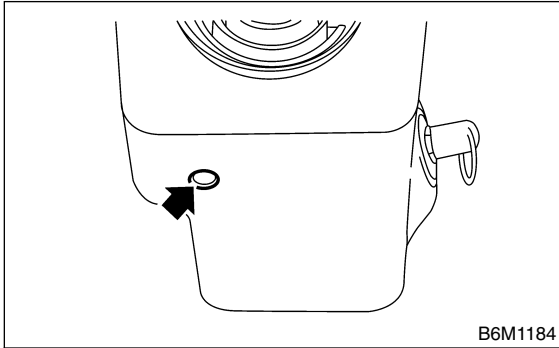

- 4) Disconnect connector from combination switch.
- 5) Remove screws which secure switch and remove switch.

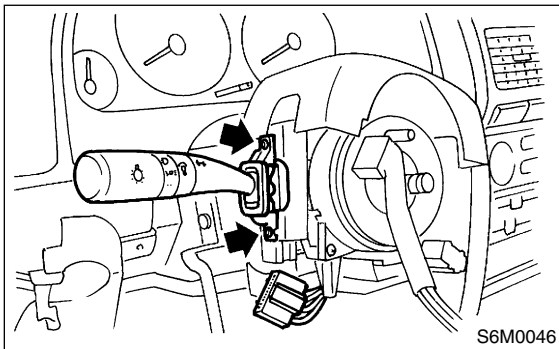


B: INSTALLATION S914411A11

Install in the reverse order of removal.

C: INSPECTION S914411A10

Measure combination switch resistance.

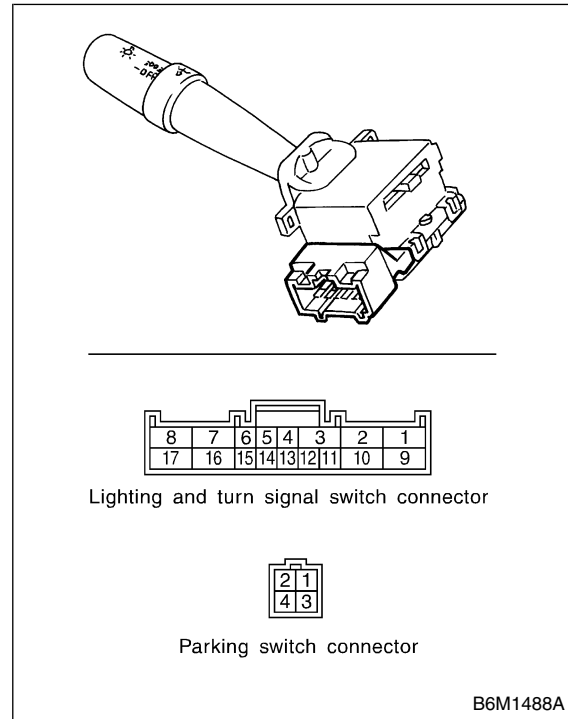

1. LIGHTING SWITCH S914411A1001

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
Tail	14 and 16	Less than 1 Ω
Head	13, 14 and 16	Less than 1 Ω

2. DIMMER AND PASSING SWITCH S914411A1002

Switch position	Terminal No.	Standard
Passing	7, 8 and 16	Less than 1 Ω
Low beam	16 and 17	Less than 1 Ω
High beam	7 and 16	Less than 1 Ω

3. TURN SIGNAL SWITCH S914411A1003

Switch position	Terminal No.	Standard
Left	1 and 2	Less than 1 Ω
Neutral	—	More than 1 MΩ
Right	2 and 3	Less than 1 Ω

4. PARKING SWITCH S914411A1004

Switch position	Terminal No.	Standard
OFF	2 and 4	Less than 1 Ω
ON	1 and 4	Less than 1 Ω