


HEADLIGHT ASSEMBLY

Lighting System


9. Headlight Assembly S914409

A: REMOVAL S914409A18


- 1) Disconnect ground cable from battery.
- 2) Remove duct (A) (when right side headlight is removed).

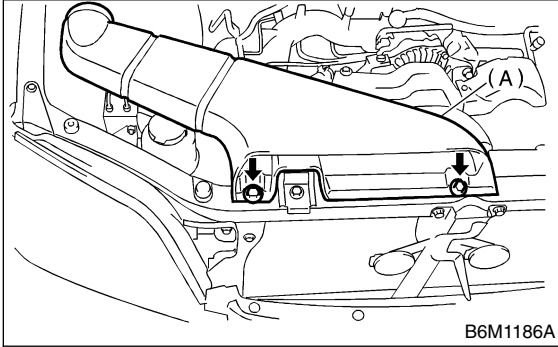

- 3) Disconnect headlight bulb connector.

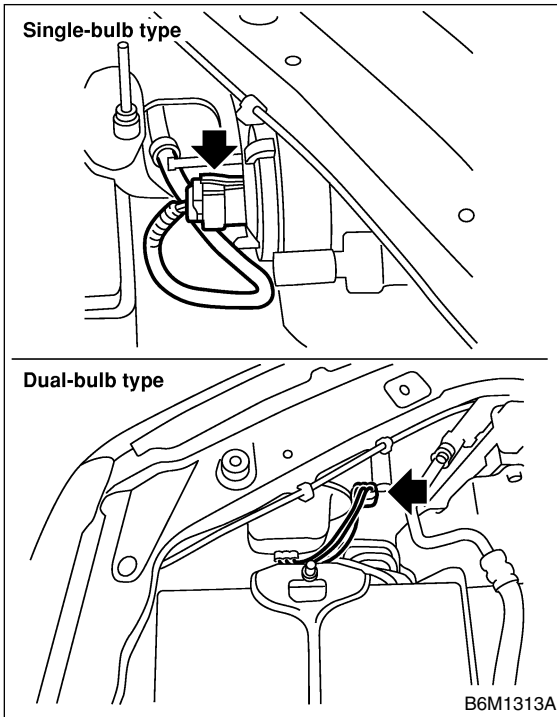

- 4) Remove three bolts and disconnect connectors, and then detach headlight assembly.

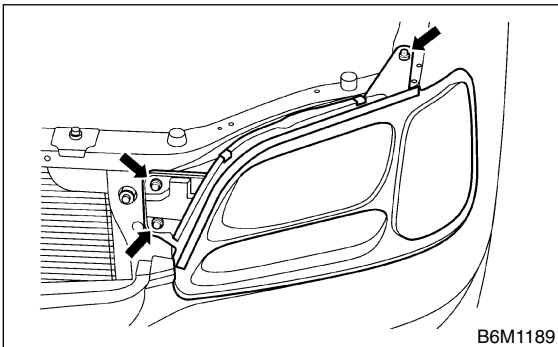

B: INSTALLATION S914409A11

Install in the reverse order of removal.

C: ADJUSTMENT S914409A01

1. HEADLIGHT AIMING S914409A0101

NOTE:

As this headlight is the "VISUAL AIMING TYPE", it is possible to adjust aiming only in the vertical direction. It cannot be adjusted in the horizontal direction.

CAUTION:

Turn off the light before adjusting headlight aiming. If the light is necessary to check aiming, do not turn on for more than two minutes.

NOTE:


Before checking the headlight aiming, be sure of the following:

- The area around the headlight has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on level ground.
- The inflation pressure of tires is correct.
- Vehicle's gas tank is full.
- Bounce the vehicle several times to normalize the suspension.
- Make certain that someone is seated in the driver's seat.

Turn the headlight on and then adjust the low beam pattern to the following positions on the screen.

NOTE:



Adjust the headlight aiming by turning the adjusting screw (a).

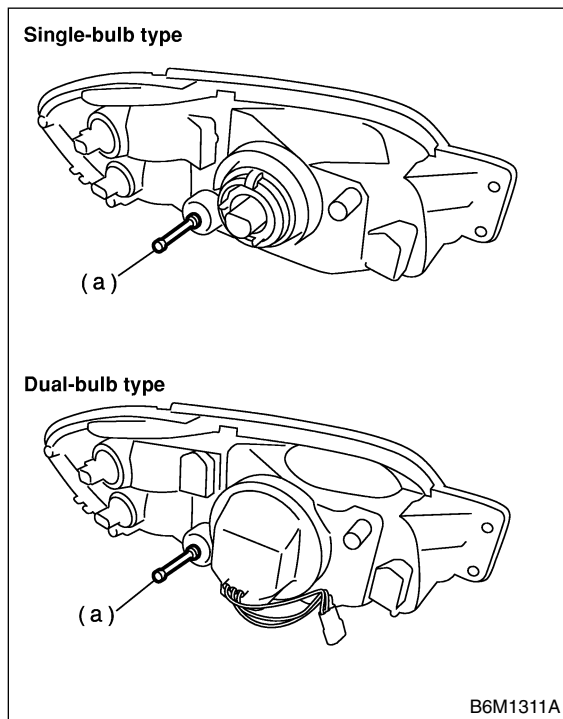



HEADLIGHT ASSEMBLY

Lighting System

Single-bulb headlight

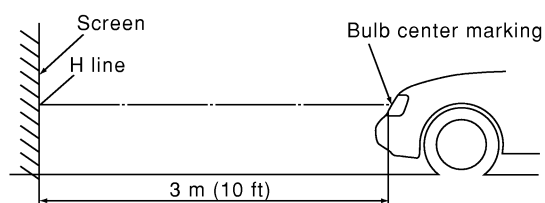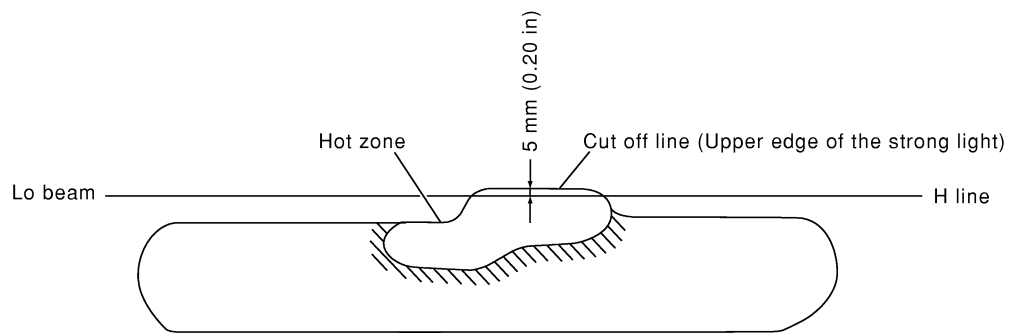

Dual-bulb headlight

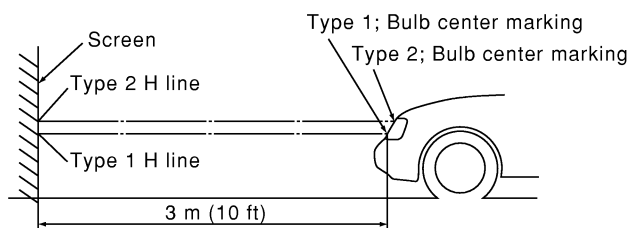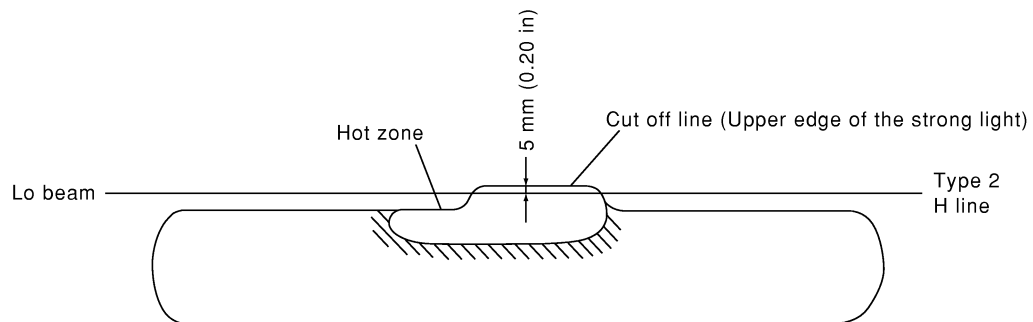

B6M1312A