


12. Parking Light Bulb and Side Marker Light Bulb S914413

A: REMOVAL S914413A18

- 1) Remove headlight assembly. <Ref. to LI-10, REMOVAL, Headlight Assembly.>
- 2) Turn the socket and remove the bulb.

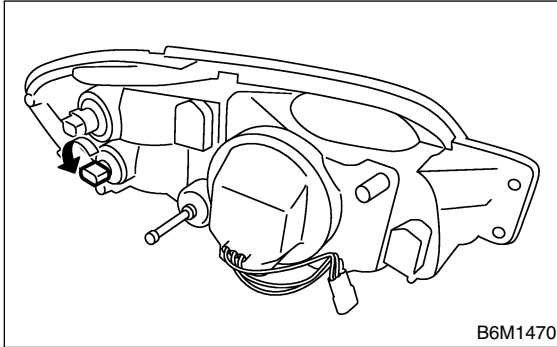

B: INSTALLATION S914413A11

Install in the reverse order of removal.

C: INSPECTION S914413A10

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.