

REAR COMBINATION LIGHT ASSEMBLY


Lighting System

15. Rear Combination Light Assembly S914426


A: REMOVAL S914426A18

1. SEDAN S914426A1801


- 1) Disconnect ground cable from battery.
- 2) Remove clips and then detach trunk rear trim.

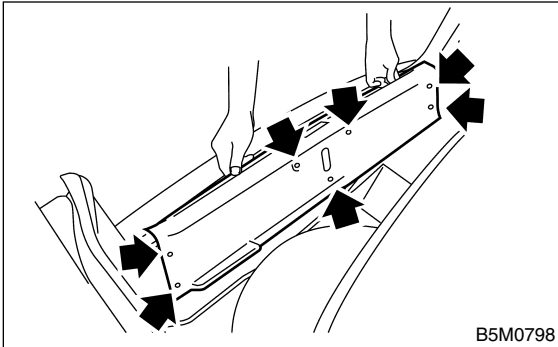

- 3) Remove hook (A) and then turn over rear portion of trunk side trim.

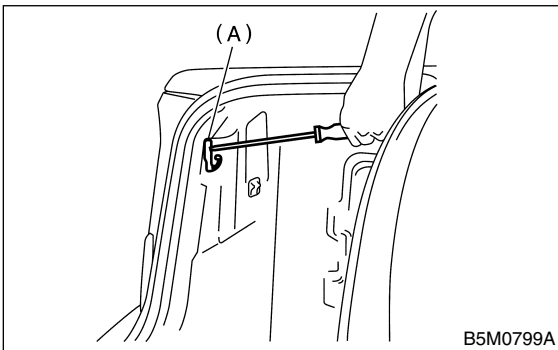

- 4) Remove harness clip (A).
- 5) Remove three nuts and then detach rear combination light while disconnecting connector.

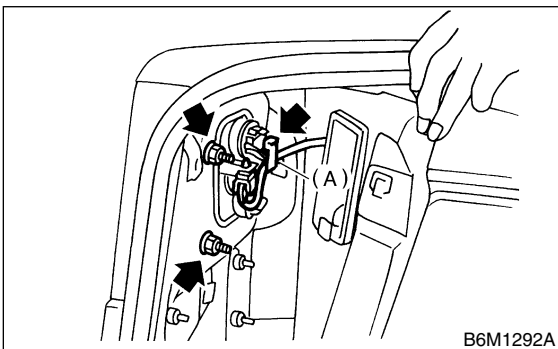


2. WAGON S914426A1802

- 1) Disconnect ground cable from battery.
- 2) Remove two rear quarter trim covers.
- 3) Remove two nuts and then remove rear combination light while disconnecting connector.

NOTE:

Before removing the nuts, apply a few turns of butyl tape to the tip of the service tool. This prevents the nuts from falling during removal.

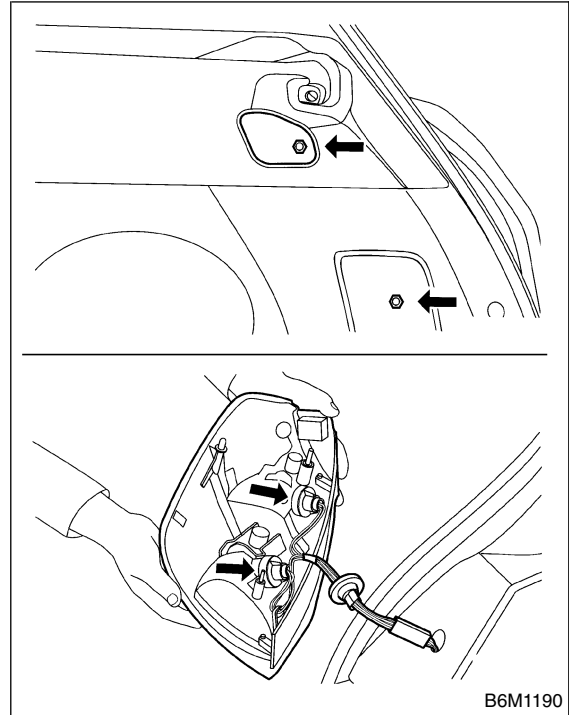

B: INSTALLATION S914426A11

Install in the reverse order of removal.