


20. License Plate Light S914420

A: REMOVAL S914420A18

- 1) Remove license plate light mounting screw (A) and then remove the lens (B)

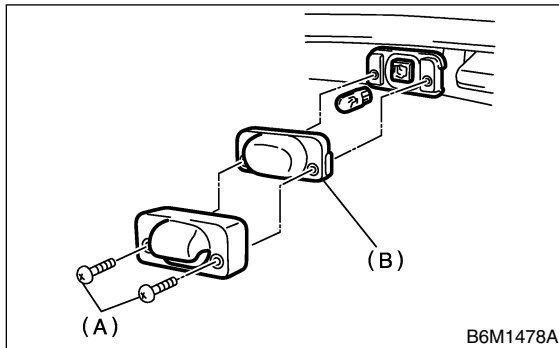

- 2) Remove the bulb.

B: INSTALLATION S914420A11

Install in the reverse order of removal.

C: INSPECTION S914420A10

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.