


## 6. Front Outer Handle S909349

### A: REMOVAL S909349A18

- 1) Remove the door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Remove the front door latch assembly. <Ref. to SL-29, REMOVAL, Front Door Latch Assembly.>
- 4) Remove the two rod joints.
- 5) Remove the two bolts. Remove the front outer handle (A).

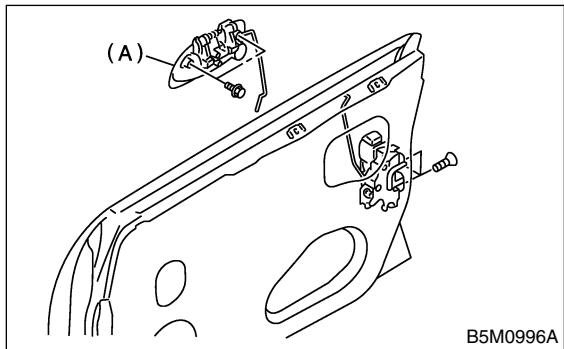

### CAUTION:

**Do not use excessive force to remove the door panel. This will deform it.**

### B: INSTALLATION S909349A11

Install in the reverse order of removal.

### NOTE:

Make sure the outer handle works properly after installation.

### C: INSPECTION S909349A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.