


10. Rear Outer Handle S909322

A: REMOVAL S909322A18

- 1) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove the rear door latch assembly. <Ref. to SL-33, REMOVAL, Rear Door Latch Assembly.>
- 4) Remove the two bolts and nut. Remove the rear outer handle.

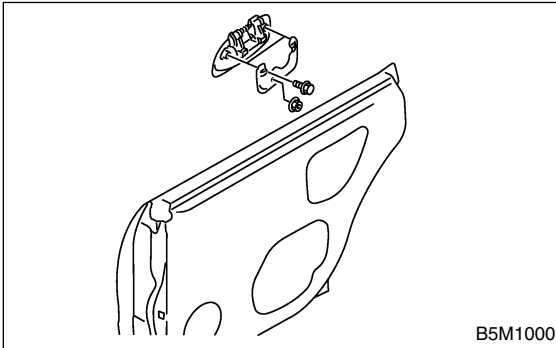

CAUTION:

Do not use excessive force to remove the door panel. This will deform it.

B: INSTALLATION S909322A11

Install in the reverse order of removal.

NOTE:

Make sure the outer handle works properly after installation.

C: INSPECTION S909322A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.