


## 11. Rear Door Latch Assembly

S909320

### A: REMOVAL S909320A18

- 1) Disconnect ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 4) Remove the rear inner remote. <Ref. to SL-31, REMOVAL, Rear Inner Remote.>
- 5) Remove the three screws and bolt.

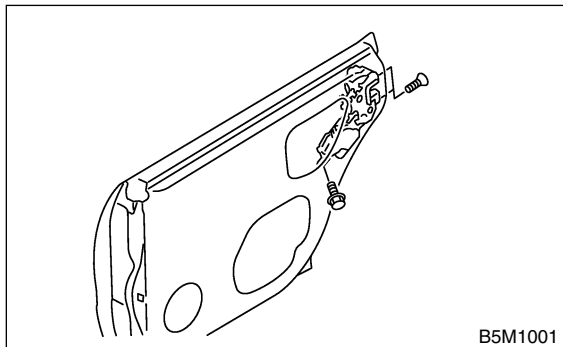

- 6) Disconnect the connector. Remove the rear door latch assembly.

### B: INSTALLATION S909320A11

Install in the reverse order of removal.

#### NOTE:

Make sure the lock operates properly after installation.

### C: INSPECTION S909320A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.
- 3) Make sure the child safety lock on the rear doors works properly.