


13. Rear Gate Outer Handle S909626

A: REMOVAL S909626A18

- 1) Remove the rear gate lower trim. <Ref. to EI-49, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear gate latch rod.
- 3) Remove the nut holding the rear gate outer handle, and then remove the rear gate outer handle.

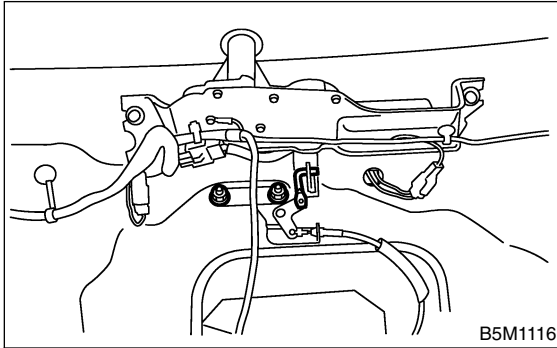

B: INSTALLATION S909626A11

Install in the reverse order of removal.

NOTE:

Make sure the outer handle works properly after installation.

C: INSPECTION S909626A10

- 1) Inspect the rod for deformation.
- 2) Make sure the lever and rod move smoothly.