


14. Rear Gate Latch Assembly

S909316

A: REMOVAL S909316A18

- 1) Disconnect ground cable from battery.
- 2) Remove the rear gate lower trim. <Ref. to EI-49, REMOVAL, Rear Gate Trim.>
- 3) Remove the rear gate key cylinder rod.
- 4) Remove the nut holding the rear gate outer handle. Remove the stay.
- 5) Remove the three bolts.

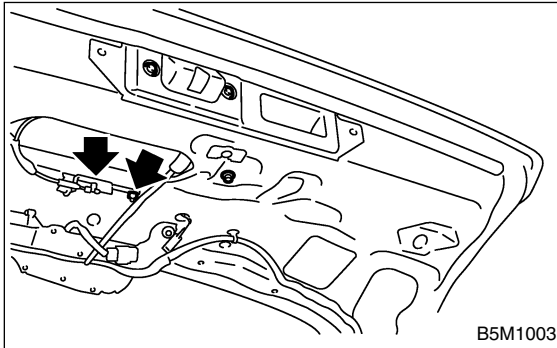

- 6) Remove the two connectors and pull out the latch.

B: INSTALLATION S909316A11

Install in the reverse order of removal.

NOTE:

Make sure the lock operates properly after installation.

C: INSPECTION S909316A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.