


WASHER TANK AND MOTOR

Wiper and Washer Systems

5. Washer Tank and Motor S902405

A: REMOVAL S902405A18

- 1) Open hood.
- 2) Remove the 2 bolts, hose and connector and then remove the tank.

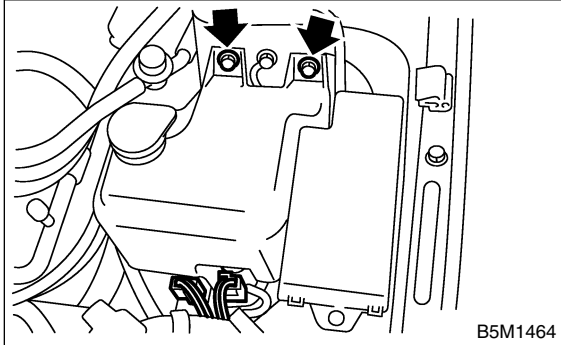

B: INSTALLATION S902405A11


Install in the reverse order of removal.

Tightening torque:

5.9 N·m (0.6 kgf·m, 4.3 ft·lb)

C: DISASSEMBLY S902405A06

Remove washer motor from tank.

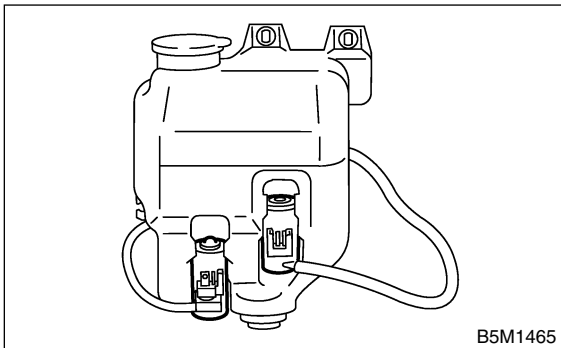

D: ASSEMBLY S902405A02

- 1) Assemble in the reverse order of disassembly.
- 2) Confirm that water does not leak from installation area of motor.

E: INSPECTION S902405A10

Apply battery voltage to the connector terminal of the washer motor and make sure the motor operates.

