

FRONT WIPER MOTOR AND LINK


Wiper and Washer Systems

7. Front Wiper Motor and Link


S902406

A: REMOVAL S902406A18

- 1) Disconnect ground cable from battery.
- 2) Remove cowl panel. <Ref. to EI-27, REMOVAL, Cowl Panel.>
- 3) Disconnect wiper motor connector.
- 4) Loosen bolts and nuts to remove wiper link.

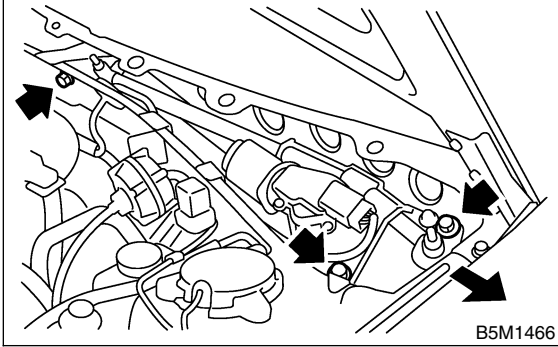

- 5) Loosen bolts and nut to remove motor.

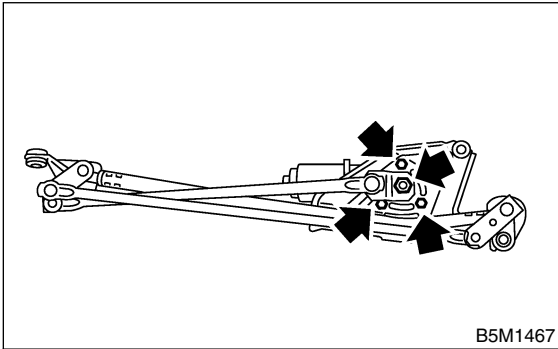

B: INSTALLATION S902406A11


Install in the reverse order of removal.

Tightening torque:


Refer to COMPONENT in General Description. <Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

C: INSPECTION S902406A10


- 1) When battery is connected to terminal of connectors, confirm that motor operates at low speed.

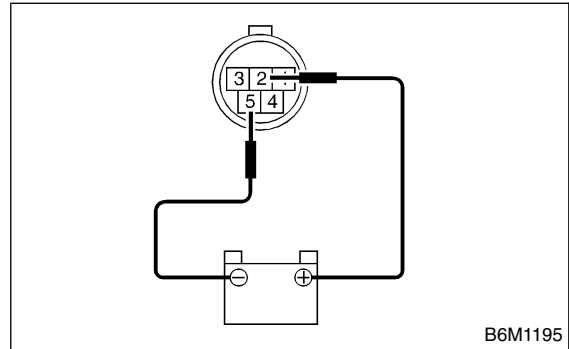

- 2) When battery is connected to terminal of connectors, confirm that motor operates at high speed.

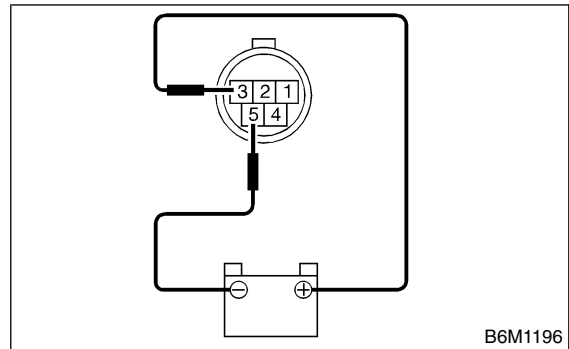

- 3) Connect battery to terminals of connector, and remove terminal connection with motor rotated at low speed, and stop wiper motor through operation.

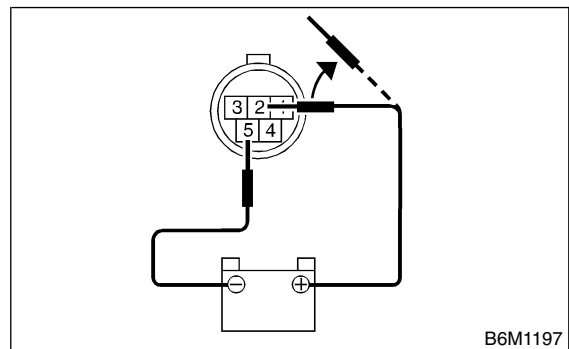

4) Connect battery and confirm that motor stops at automatic stop position after motor operates at low speed again.

