

BASIC DIAGNOSTIC PROCEDURE

ABS (Diagnostics)

1. Basic Diagnostic Procedure S006501

A: PROCEDURE S006501E45

1. WITHOUT SUBARU SELECT MONITOR S006501E4501

CAUTION:

Remove foreign matter (dust, water, etc.) from the ABSCM&H/U connector during removal and installation.

NOTE:

- To check harness for broken wires or short circuits, shake it while holding it or the connector.
- When ABS warning light illuminates, read and record diagnostic trouble code (DTC) indicated by ABS warning light.

No.	Step	Check	Yes	No
1	<p>CHECK PRE-INSPECTION.</p> <p>1) Ask the customer when and how the trouble occurred using interview checklist. <Ref. to ABS-5, Check List for Interview.></p> <p>2) Before performing diagnosis, inspect unit which might influence the ABS problem. <Ref. to ABS-8, INSPECTION, General Description.></p>	Is unit that might influence the ABS problem normal?	Go to step 2.	Repair or replace each unit.
2	<p>CHECK INDICATION OF TROUBLE CODE (DTC).</p> <p>Calling up diagnostic trouble code (DTC). <Ref. to ABS-18, Read Diagnostic Trouble Code (DTC).></p>	Is diagnostic trouble code (DTC) readable?	Go to step 3.	<p>Inspect using diagnostic chart for ABS warning light failure. <Ref. to ABS-26, Diagnostics Chart with Diagnosis Connector.></p> <p>NOTE:</p> <p>Call up diagnostic trouble code (DTC) again after inspecting ABS warning light. <Ref. to ABS-18, Read Diagnostic Trouble Code (DTC).></p>
3	<p>CHECK TROUBLE CODE.</p> <p>NOTE:</p> <p>Record all diagnostic trouble codes (DTCs).</p>	Is only the start code issued?	Go to step 4.	Go to step 5.
4	<p>PERFORM THE GENERAL DIAGNOSTICS.</p> <p>1) Inspect using "General Diagnostics Table". <Ref. to ABS-155, General Diagnostics Table.></p> <p>2) Perform the clear memory mode. <Ref. to ABS-21, WITHOUT SUBARU SELECT MONITOR, OPERATION, Clear Memory Mode.></p> <p>3) Perform the inspection mode. <Ref. to ABS-20, Inspection Mode.></p> <p>Calling up the diagnostic trouble code (DTC). <Ref. to ABS-18, Read Diagnostic Trouble Code (DTC).></p>	Is only the start code issued?	Complete the diagnosis.	Go to step 5.

BASIC DIAGNOSTIC PROCEDURE

ABS (Diagnostics)

No.	Step	Check	Yes	No
5	<p>PERFORM THE DIAGNOSIS.</p> <p>1) Inspect using "Diagnostics Chart with Diagnostic Connector". <Ref. to ABS-26, Diagnostics Chart with Diagnosis Connector.></p> <p>NOTE: For diagnostic trouble code (DTC) list, refer to "List of Diagnostic Trouble Code (DTC)". <Ref. to ABS-23, WITHOUT SUBARU SELECT MONITOR, LIST, List of Diagnostic Trouble Code (DTC).></p> <p>2) Repair trouble cause.</p> <p>3) Perform the clear memory mode. <Ref. to ABS-21, WITHOUT SUBARU SELECT MONITOR, OPERATION, Clear Memory Mode.></p> <p>4) Perform the inspection mode. <Ref. to ABS-20, Inspection Mode.></p> <p>5) Calling up the diagnostic trouble code (DTC). <Ref. to ABS-18, Read Diagnostic Trouble Code (DTC).></p>	Is only the start code issued?	Complete the diagnosis.	Inspect using "Diagnostics Chart with Diagnostic Connector". <Ref. to ABS-26, Diagnostics Chart with Diagnosis Connector.>

2. WITH SUBARU SELECT MONITOR S006501E4502

CAUTION:

Remove foreign matter (dust, water, etc.) from the ABSCM&H/U connector during removal and installation.

NOTE:

- To check harness for broken wires or short circuits, shake it while holding it or the connector.
- Check list for interview. <Ref. to ABS-24, WITH SUBARU SELECT MONITOR, LIST, List of Diagnostic Trouble Code (DTC).>

No.	Step	Check	Yes	No
1	<p>CHECK PRE-INSPECTION.</p> <p>1) Ask the customer when and how the trouble occurred using interview checklist. <Ref. to ABS-5, Check List for Interview.></p> <p>2) Before performing diagnosis, inspect unit which might influence the ABS problem. <Ref. to ABS-8, INSPECTION, General Description.></p>	Is unit that might influence the ABS problem normal?	Go to step 2.	Repair or replace each unit.
2	<p>CHECK INDICATION OF TROUBLE CODE DISPLAY.</p> <p>1) Turn ignition switch to OFF.</p> <p>2) Connect the SUBARU SELECT MONITOR to data link connector.</p> <p>3) Turn ignition switch to ON and SUBARU SELECT MONITOR to ON.</p> <p>NOTE: If the communication function of the select monitor cannot be executed normally, check the communication circuit. <Ref. to ABS-80, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostics Chart with Subaru Select Monitor.></p> <p>4) Read diagnostic trouble code (DTC). <Ref. to ABS-17, READ CURRENT DATA, OPERATION, Subaru Select Monitor.></p> <p>5) Record all diagnostic trouble codes (DTCs) and frame data.</p>	Is the corresponding trouble encoding?	Go to step 3.	Go to step 4.

BASIC DIAGNOSTIC PROCEDURE

ABS (Diagnostics)

No.	Step	Check	Yes	No
3	<p>PERFORM THE GENERAL DIAGNOSTICS.</p> <p>1) Inspect using "General Diagnostics Table". <Ref. to ABS-155, General Diagnostics Table.></p> <p>2) Perform the clear memory mode. <Ref. to ABS-17, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.></p> <p>3) Perform the inspection mode. <Ref. to ABS-20, Inspection Mode.></p> <p>4) Calling up the diagnostic trouble code (DTC). <Ref. to ABS-16, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.></p>	Is no trouble code designated and does ABS warning light go out after turning on?	Complete the diagnosis.	Go to step 4.
4	<p>PERFORM THE DIAGNOSIS.</p> <p>1) Inspect using "Diagnostics Chart with Subaru Select Monitor". <Ref. to ABS-80, Diagnostics Chart with Subaru Select Monitor.></p> <p>NOTE: For diagnostic trouble code (DTC) list, refer to "List of Diagnostic Trouble Code (DTC)". <Ref. to ABS-23, WITHOUT SUBARU SELECT MONITOR, LIST, List of Diagnostic Trouble Code (DTC).></p> <p>2) Repair trouble cause.</p> <p>3) Perform the clear memory mode. <Ref. to ABS-17, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.></p> <p>4) Perform the inspection mode. <Ref. to ABS-20, Inspection Mode.></p> <p>5) Calling up the diagnostic trouble code (DTC). <Ref. to ABS-16, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.></p>	Is no diagnostic trouble code (DTC) designated and does ABS warning light go out after turning on?	Complete the diagnosis.	Inspect using "Diagnostics Chart with Subaru Select Monitor". <Ref. to ABS-80, Diagnostics Chart with Subaru Select Monitor.>