

17. General Diagnostics S405278

A: INSPECTION S405278A10

	Trouble and possible cause	Corrective action
1. Insufficient braking	(1) Fluid leakage from the hydraulic mechanism	Repair or replace (cup, piston seal, piston boot, master cylinder piston kit, pipe or hose).
	(2) Entry of air into the hydraulic mechanism	Bleed the air.
	(3) Excessively wide shoe clearance	Adjust the clearance.
	(4) Wear, deteriorated surface material, adhering water or fluid on the lining	Replace, grind or clean.
	(5) Improper operation of master cylinder, disc caliper, brake booster or check valve	Correct or replace.
2. Unstable or uneven braking	(1) Fluid on the lining or rotor	Eliminate cause of fluid leakage, clean, or replace.
	(2) Rotor eccentricity	Correct or replace the rotor.
	(3) Improper lining contact, deteriorated surface material, improper inferior material, or wear	Correct by grinding, or replace.
	(4) Deformed back plate	Correct or replace.
	(5) Improper tire inflation	Inflate to correct pressure.
	(6) Disordered wheel alignment	Adjust alignment.
	(7) Loosened back plate or the support installing bolts	Retighten.
	(8) Loosened wheel bearing	Retighten to normal tightening torque or replace.
	(9) Trouble in the hydraulic system	Replace the cylinder, brake pipe or hose.
	(10) Uneven effect of the parking brake	Check, adjust, or replace the rear brake and cable system.
3. Excessive pedal stroke	(1) Entry of air into the hydraulic mechanism	Bleed the air.
	(2) Excessive play in the master cylinder push rod	Adjust.
	(3) Fluid leakage from the hydraulic mechanism	Repair or replace (cup, piston seal, piston boot, master cylinder piston kit, pipe or hose).
	(4) Improperly adjusted shoe clearance	Adjust.
	(5) Improper lining contact or worn lining	Correct or replace.
4. Brake dragging or improper brake return	(1) Insufficient pedal play	Adjust play.
	(2) Improper master cylinder return	Clean or replace the cylinder.
	(3) Clogged hydraulic system	Replace.
	(4) Improper return or adjustment of parking brake	Correct or adjust.
	(5) Weakened spring tension or breakage of shoe return spring	Replace the spring.
	(6) Excessively narrow shoe clearance	Adjust the clearance.
	(7) Improper disc caliper operation	Correct or replace.
	(8) Improper adjusted wheel bearing	Adjust or replace.
5. Brake noise (1) (creak sound)	(1) Hardened or deteriorated lining	Replace the shoe assembly or pad.
	(2) Worn lining	Replace the shoe assembly or pad.
	(3) Loosened back plate or the support installing bolts	Retighten.
	(4) Loose wheel bearing	Retighten to normal tightening torque.
	(5) Dirty rotor	Clean the rotor, or clean and replace the brake assembly.
6. Brake noise (2) (hissing sound)	(1) Worn lining	Replace the shoe assembly or pad.
	(2) Improper installed shoe or pad	Correct or replace the shoe assembly or pad.
	(3) Loose or bent rotor	Retighten or replace.

GENERAL DIAGNOSTICS

Brake

	Trouble and possible cause	Corrective action
7. Brake noise (3) (click sound)	(1) Excessively worn pad or the support	Replace the pad or the support.
	(2) Excessively worn shoe ridge	Replace the back plate.
	(3) Lack of oil on the shoe ridge surface and anchor	Add more grease.