


7. Rear Differential Front Member

S303808

A: REMOVAL

S303808A18

- 1) Disconnect battery ground cable.
- 2) Jack-up the vehicle.
- 3) Using a transmission jack, support rear differential, and remove rear differential front member.

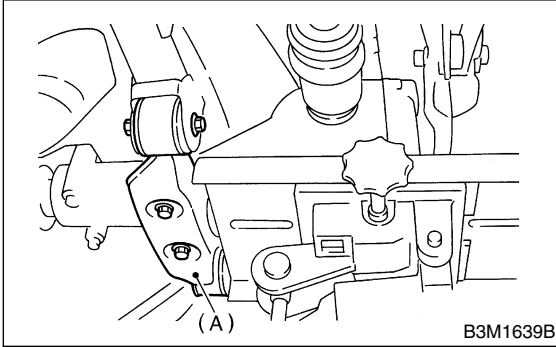

(A) Rear differential front member

B: INSTALLATION


S303808A11

- 1) Install rear differential front member.

Tightening torque:

T1: 65 N·m (6.6 kgf-m, 48 ft-lb)

T2: 110 N·m (11.2 kgf-m, 81 ft-lb)

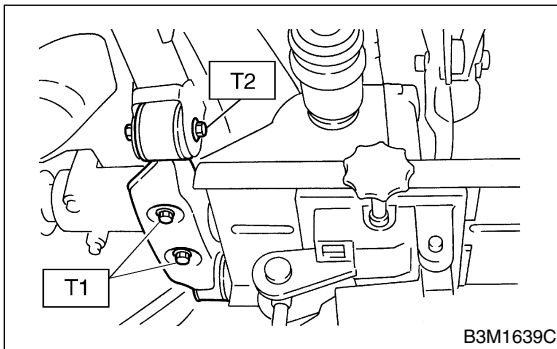

C: INSPECTION

S303808A10

- 1) Check rear differential front member for damage, bend, or corrosion. If damage, bend, or corrosion is excessive, replace rear differential front member.
- 2) Check bushings of rear differential front member for cracking, hardening, or damage. If cracking, hardening, or damage is excessive, replace rear differential front member.