

# FRONT CATALYTIC CONVERTER

Emission Control (Aux. Emission Control Devices)


## 2. Front Catalytic Converter S170017

### A: REMOVAL S170017A18

- 1) Remove front and center exhaust pipes. <Ref. to EX-5, REMOVAL, Front Exhaust pipe.>
- 2) Separate front catalytic converter from front exhaust pipe.

#### NOTE:

The front catalytic converter is intergrated with rear catalytic converter.

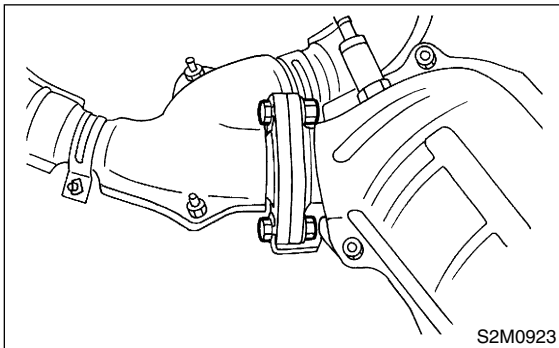

### B: INSTALLATION S170017A11


#### NOTE:

Replace gaskets with new ones.

- 1) Install front catalytic converter to front exhaust pipe.

#### **Tightening torque:**

**30 N·m (3.1 kgf·m, 22.4 ft·lb)**

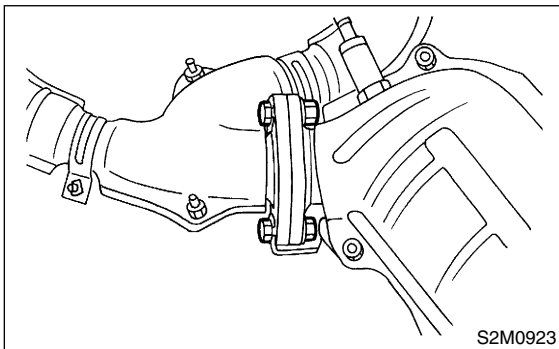

- 2) Install front and center exhaust pipes. <Ref. to EX-6, INSTALLATION, Front Exhaust Pipe.>

### C: INSPECTION S170017A10

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.