

# MAIN FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

---

## 6. Main Fuel Level Sensor S170038

### A: REMOVAL S170038A18

For work procedures, refer to “FU” section. <Ref. to FU-76, REMOVAL, Fuel Level Sensor.>

### B: INSTALLATION S170038A11

For work procedures, refer to “FU” section. <Ref. to FU-76, INSTALLATION, Fuel Level Sensor.>