

SUB FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

8. Sub Fuel Level Sensor S170029

A: REMOVAL S170029A18

For work procedures, refer to “FU” section. <Ref. to FU-77, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION S170029A11

For work procedures, refer to “FU” section. <Ref. to FU-78, INSTALLATION, Fuel Sub Level Sensor.>