


THROTTLE BODY

Fuel Injection (Fuel Systems)


2. Throttle Body S175010

A: REMOVAL S175010A18


- 1) Disconnect battery ground cable.

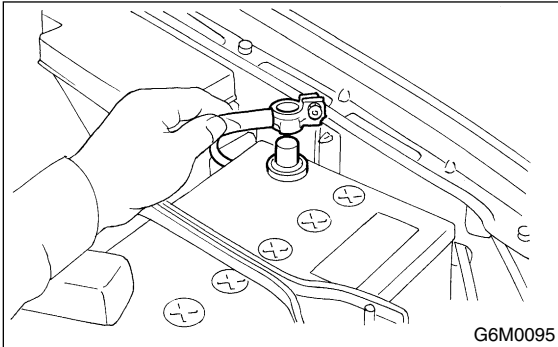


- 2) Remove air cleaner case.

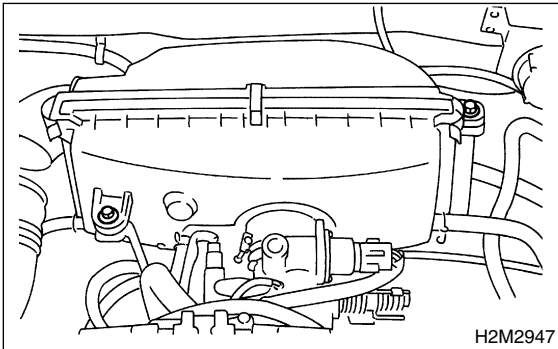

- 3) Disconnect accelerator cable (A).
- 4) Disconnect cruise control cable (B). (With cruise control model)

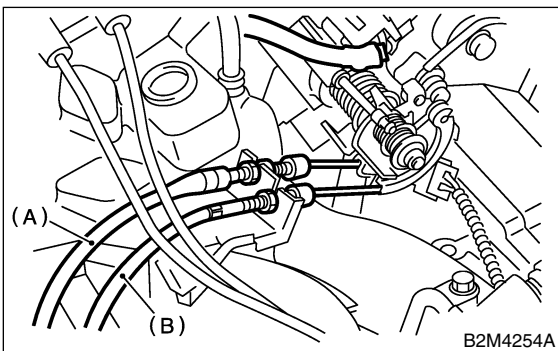


- 5) Disconnect connectors from idle air control solenoid valve, throttle position sensor.
- 6) Disconnect air by-pass hose from air assist injector solenoid valve.

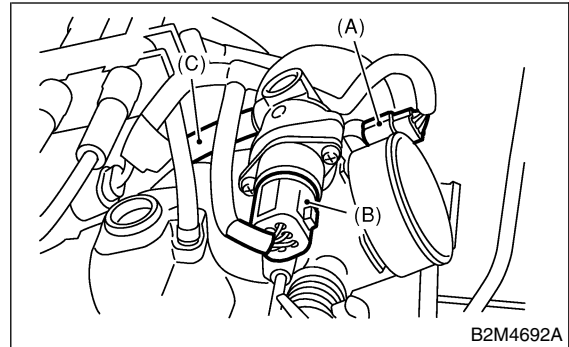

- (A) Throttle position sensor
- (B) Idle air control solenoid valve
- (C) Air by-pass hose from air assist injector solenoid valve

- 7) Disconnect engine coolant hoses from throttle body.

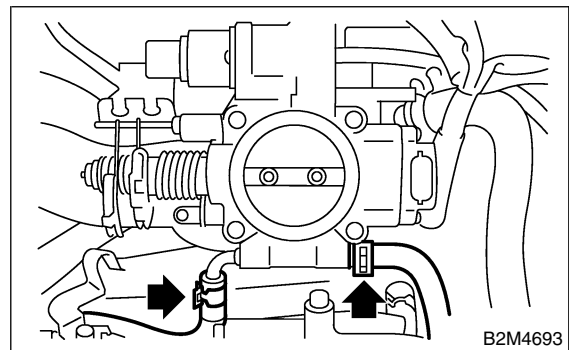

- 8) Remove bolts which install throttle body to intake manifold.

B: INSTALLATION S175010A11

Install in the reverse order of removal.

NOTE:

Always use a new gasket.

Tightening torque:

Throttle body;

22 N·m (2.2 kgf·m, 15.9 ft·lb)

Air cleaner case;

6.5 N·m (0.66 kgf·m, 4.8 ft·lb)