

ENGINE COOLANT TEMPERATURE SENSOR

Fuel Injection (Fuel Systems)


4. Engine Coolant Temperature Sensor

S175047


A: REMOVAL

S175047A18

- 1) Disconnect battery ground cable.

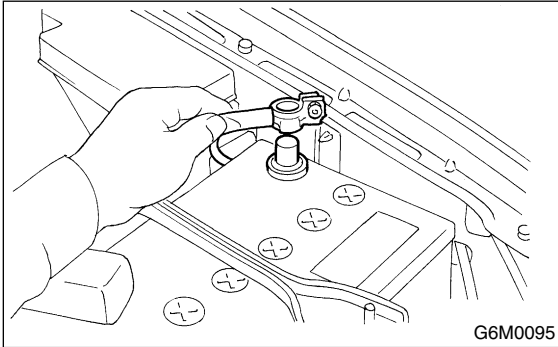

- 2) Remove air intake duct and air cleaner case.
<Ref. to IN-7, REMOVAL, Air Intake Duct.> and
<Ref. to IN-6, REMOVAL, Air Cleaner Case.>
- 3) Disconnect connector from engine coolant temperature sensor.

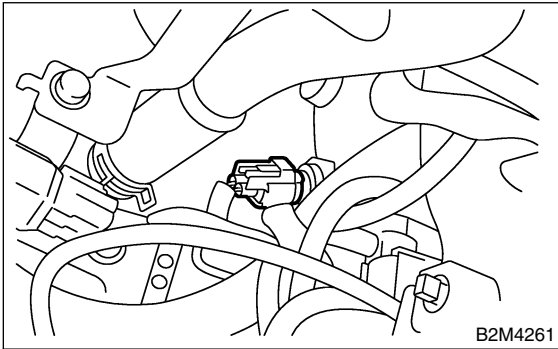

- 4) Remove engine coolant temperature sensor.

B: INSTALLATION

S175047A11

Install in the reverse order of removal.

Tightening torque:

16 N·m (0.16 kgf-m, 1.2 ft-lb)

