



10. Idle Air Control Solenoid Valve S175056

A: REMOVAL S175056A18


- 1) Disconnect battery ground cable.

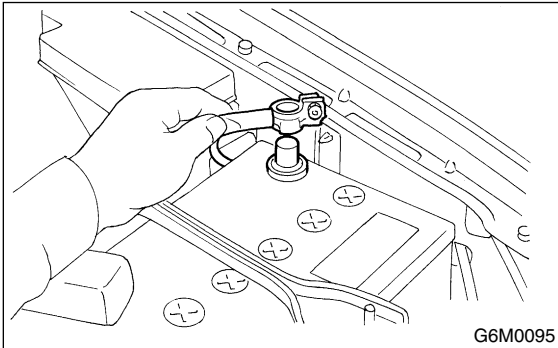

- 2) Disconnect connector from idle air control solenoid valve.

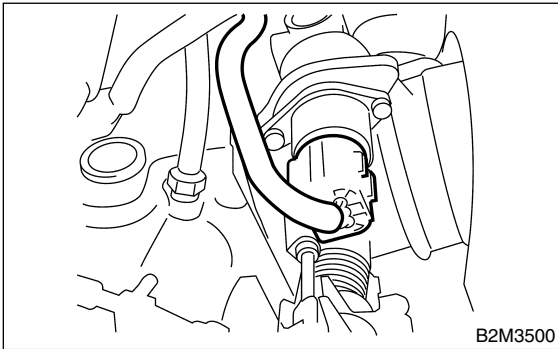

- 3) Remove idle air control solenoid valve from throttle body.

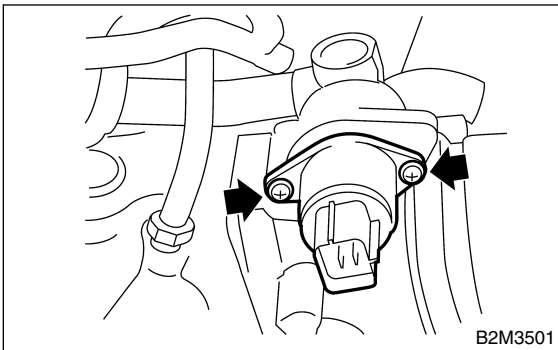

B: INSTALLATION S175056A11

Install in the reverse order of removal.

NOTE:
Always use a new gasket.

Tightening torque:
2.4 N·m (0.24 kgf-m, 1.7 ft-lb)

