


AIR CLEANER CASE

Intake (Induction)


3. Air Cleaner Case S174089

A: REMOVAL S174089A18

1) Loosen clamp which connects air cleaner case to throttle body.

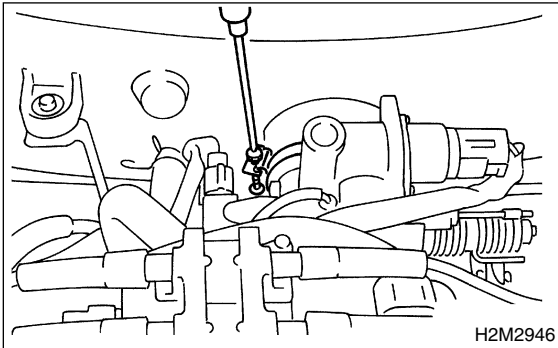

2) Disconnect hoses from air cleaner case.
3) Remove bolts which install air cleaner case to stays.

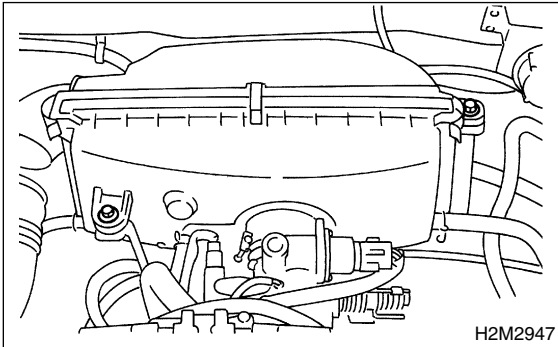

4) Remove air cleaner case.

B: INSTALLATION S174089A11

Install in the reverse order of removal.

C: INSPECTION S174089A10

Inspect for cracks and loose connections.