


RESONATOR CHAMBER

Intake (Induction)

5. Resonator Chamber S174639

A: REMOVAL S174639A18

- 1) Remove air intake duct. <Ref. to IN-7, REMOVAL, Air Intake Duct.>
- 2) Remove resonator chamber.

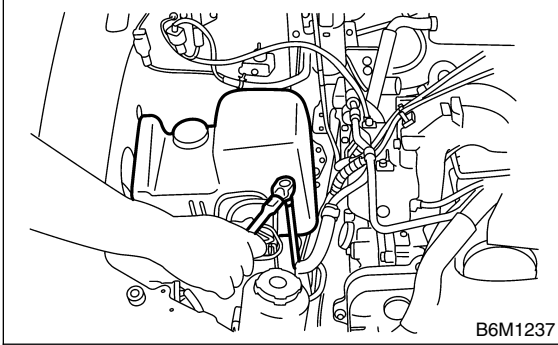


B: INSTALLATION S174639A11

Install in the reverse order of removal.

Tightening torque:

33 N·m (3.4 kgf·m, 24.6 ft·lb)

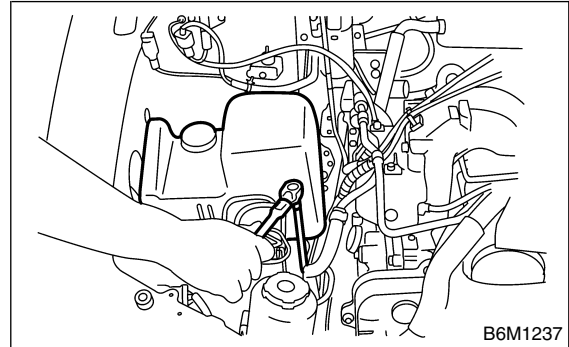

C: INSPECTION S174639A10

Inspect for cracks and loose connections.