

10. Engine Mounting S173085

A: REMOVAL S173085A18

- 1) Remove engine assembly. <Ref. to ME-33, REMOVAL, Engine Assembly.>
- 2) Remove engine mounting from engine assembly.

B: INSTALLATION S173085A11

Install in the reverse order of removal.

Tightening torque:

Engine mounting;

35 N·m (3.6 kgf·m, 26 ft-lb)

C: INSPECTION S173085A10

Make sure there are no cracks or other damage.