22. Engine Trouble in General

S173095

A: INSPECTION S173095A10

NOTE:

"RANK" shown in the chart refer to the possibility of reason for the trouble in order ("Very often" to "Rarely")

- A Very often
- B Sometimes
- C Rarely

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
1. Engine will not start.			
1) Starter does not turn.	Starter	Defective battery-to-starter harness	В
		Defective starter switch	С
		Defective inhibitor switch or neutral switch	С
		Defective starter	В
	Battery	Poor terminal connection	Α
		Run-down battery	Α
		Defective charging system	В
	Friction	Seizure of crankshaft and connecting rod bearing	С
		Seized camshaft	С
		Seized or stuck piston and cylinder	С
2) Initial combustion does not	Starter	Defective starter	С
occur.	Engine control system <ref. basic="" diagnostic="" en-2,="" procedure.="" to=""></ref.>		Α
	• Fuel line	Defective fuel pump and relay	Α
		Lack of or insufficient fuel	В
	Belt	Defective	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3) Initial combustion occur.	Engine control system <ref. basic="" diagnostic="" en-2,="" procedure.="" to=""></ref.>		Α
	Intake system	Defective intake manifold gasket	В
		Defective throttle body gasket	В
	• Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	• Belt	Defective	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		 Loosened spark plugs or defective gasket 	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В
4) Engine stalls after initial	• Engine control system <ref.< td=""><td>to EN-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.<>	to EN-2, Basic Diagnostic Procedure.>	Α
combustion.	Intake system	Loosened or cracked intake duct	В
		Loosened or cracked PCV hose	С
		Loosened or cracked vacuum hose	С
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Dirty air cleaner element	С
	• Fuel line	Clogged fuel line	С
		Lack of or insufficient fuel	В
	• Belt	Defective	В
		Defective timing	В
	Compression	Incorrect valve clearance	С
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	С
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	В
		Improper engine oil (low viscosity)	В

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
2. Rough idle and engine stall	Engine control system <ref. basic="" diagnostic="" en-2,="" procedure.="" to=""></ref.>		Α
	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	Α
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	С
		Loosened oil filler cap	В
		Dirty air cleaner element	С
	• Fuel line	Defective fuel pump and relay	С
		Clogged fuel line	С
		Lack of or insufficient fuel	В
	Belt	Defective timing	С
	Compression	Incorrect valve clearance	В
		Loosened spark plugs or defective gasket	В
		Loosened cylinder head bolts or defective gasket	В
		Improper valve seating	В
		Defective valve stem	С
		Worn or broken valve spring	В
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
	Lubrication system	Incorrect oil pressure	В
		Defective rocker cover gasket	С
	Cooling system	Overheating	С
	Others	Malfunction of evaporative emission control system	Α
		Stuck or damaged throttle valve	В
		Accelerator cable out of adjustment	С

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3. Low output, hesitation and	• Engine control system <ref.< td=""><td>to EN-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.<>	to EN-2, Basic Diagnostic Procedure.>	Α
poor acceleration	Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	Α
		Loosened or cracked vacuum hose	В
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	Α
	Fuel line	Defective fuel pump and relay	В
		Clogged fuel line	В
		Lack of or insufficient fuel	С
	Belt	Defective timing	В
	Compression	Incorrect valve clearance	В
	Compression	Loosened spark plugs or defective gasket	В
		Loosened cylinder head bolts or defective gasket	В
		Improper valve seating	В
		Defective valve stem	C
			В
		Worn or broken valve spring Worn or study picton rings, sulinder and picton.	C
		Worn or stuck piston rings, cylinder and piston	
		• Incorrect valve timing	A B
		Improper engine oil (low viscosity)	1
	Lubrication system	• Incorrect oil pressure	В
	Cooling system	• Overheating	С
		Over cooling	С
	Others	Malfunction of evaporative emission control system	A
4. Surging	• Engine control system <ref.< td=""><td>to EN-2, Basic Diagnostic Procedure.></td><td>A</td></ref.<>	to EN-2, Basic Diagnostic Procedure.>	A
3 3	• Intake system	Loosened or cracked intake duct	Α
		Loosened or cracked PCV hose	А
		Loosened or cracked vacuum hose	A
		Defective intake manifold gasket	В
		Defective throttle body gasket	В
		Defective PCV valve	В
		Loosened oil filler cap	В
		Dirty air cleaner element	В
	• Fuel line	Defective fuel pump and relay	В
	• Fuer line	Clogged fuel line	В
		Lack of or insufficient fuel	C
	Dala		+
	Belt	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	С
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	С
		Incorrect valve timing	Α
		Improper engine oil (low viscosity)	В
	Cooling system	Overheating	В
	Others	Malfunction of evaporative emission control sys-	С
		tem	

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
5. Engine does not return to	<u> </u>	to EN-2, Basic Diagnostic Procedure.>	A
idle.	Intake system	Loosened or cracked vacuum hose	A
	• Others	Stuck or damaged throttle valve	A
		Accelerator cable out of adjustment	В
6. Dieseling (Run-on)	Engine control system <ref. basic="" diagnostic="" en-2,="" procedure.="" to=""></ref.>		A
3(11)	Cooling system	Overheating	
	• Others	Malfunction of evaporative emission control system	B B
7. After burning in exhaust	Engine control system <ref. basic="" diagnostic="" en-2,="" procedure.="" to=""></ref.>		Α
system	Intake system	Loosened or cracked intake duct	C
	• make system	Loosened or cracked PCV hose	C
		Loosened or cracked vacuum hose	В
		Defective PCV valve	В
		Loosened oil filler cap	C
	• Belt	Defective timing	В
	Compression	Incorrect valve clearance	В
	Compression	Loosened spark plugs or defective gasket	С
		Loosened spark plugs of defective gasket Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	В
		Defective valve stem	С
			C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	
	Lubrication quaters	Incorrect valve timing	A
	Lubrication system	Incorrect oil pressure	С
	Cooling system	• Over cooling	С
	Others	Malfunction of evaporative emission control system	С
8. Knocking	• Engine control system <ref. t<="" td=""><td>o EN-2, Basic Diagnostic Procedure.></td><td>Α</td></ref.>	o EN-2, Basic Diagnostic Procedure.>	Α
8. Knocking	 Intake system 	Loosened oil filler cap	В
	Belt	Defective timing	В
	 Compression 	Incorrect valve clearance	С
		Incorrect valve timing	В
	 Cooling system 	Overheating	Α
9. Excessive engine oil con-	Intake system	Loosened or cracked PCV hose	Α
sumption		Defective PCV valve	В
		Loosened oil filler cap	С
	Compression	Defective valve stem	Α
		Worn or stuck piston rings, cylinder and piston	Α
	Lubrication system	Loosened oil pump attaching bolts and defective gasket	В
		Defective oil filler seal	В
		Defective crankshaft oil seal	В
		Defective rocker cover gasket	В
		Loosened oil drain plug or defective gasket	В
		Loosened oil pan fitting bolts or defective oil pan	В

Mechanical

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
10. Excessive fuel consump-	Engine control system <ref. basic="" diagnostic="" en-2,="" procedure.="" to=""></ref.>		Α
tion	Intake system	Dirty air cleaner element	Α
	Belt	Defective timing	В
	Compression	Incorrect valve clearance	В
		Loosened spark plugs or defective gasket	С
		Loosened cylinder head bolts or defective gasket	С
		Improper valve seating	В
		Defective valve stem	С
		Worn or broken valve spring	С
		Worn or stuck piston rings, cylinder and piston	В
		Incorrect valve timing	В
	Lubrication system	Incorrect oil pressure	С
	Cooling system	Over cooling	С
	Others	Accelerator cable out of adjustment	В