


# REAR CATALYTIC CONVERTER

Emission Control (Aux. Emission Control Devices)

## 3. Rear Catalytic Converter S140036

### A: REMOVAL S140036A18


The front and rear catalytic converter are integrated into one unit. Therefore, the removal and installation procedures are the same as the those for the front catalytic converter. <Ref. to EC(H6)-3, REMOVAL, Front Catalytic Converter.>

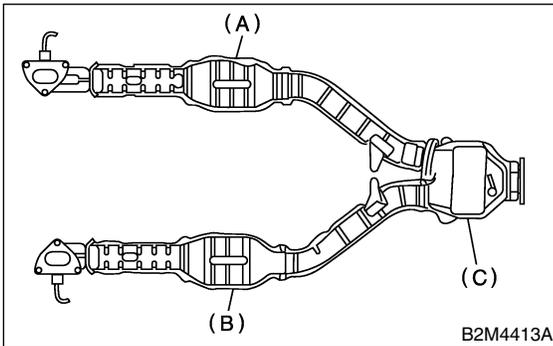

- (A) Front catalytic converter RH
- (B) Front catalytic converter LH
- (C) Rear catalytic converter

### B: INSTALLATION S140036A11

The front and rear catalytic converter are integrated into one unit. Therefore, the removal and installation procedures are the same as the ones described under front catalytic converter. <Ref. to EC(H6)-4, INSTALLATION, Front Catalytic Converter.>

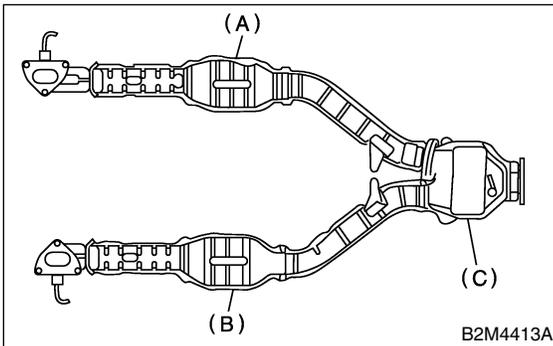

- (A) Front catalytic converter RH
- (B) Front catalytic converter LH
- (C) Rear catalytic converter

### C: INSPECTION S140036A10

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.