

MAIN FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

7. Main Fuel Level Sensor S140038

A: REMOVAL S140038A18

For work procedures, refer to “FU(H6)” section.
<Ref. to FU(H6)-73, REMOVAL, Fuel Lever Sensor.>

B: INSTALLATION S140038A11

For work procedures, refer to “FU(H6)” section.
<Ref. to FU(H6)-73, INSTALLATION, Fuel Lever Sensor.>