

SUB FUEL LEVEL SENSOR

Emission Control (Aux. Emission Control Devices)

9. Sub Fuel Level Sensor S140029

A: REMOVAL S140029A18

For work procedures, refer to “FU(H6)” section.
<Ref. to FU(H6)-74, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION S140029A11

For work procedures, refer to “FU(H6)” section.
<Ref. to FU(H6)-75, INSTALLATION, Fuel Sub Level Sensor.>