


# DRAIN VALVE

Emission Control (Aux. Emission Control Devices)


## 15. Drain Valve S140088

### A: REMOVAL S140088A18


- 1) Set the vehicle on the lift.
- 2) Disconnect battery ground cable.

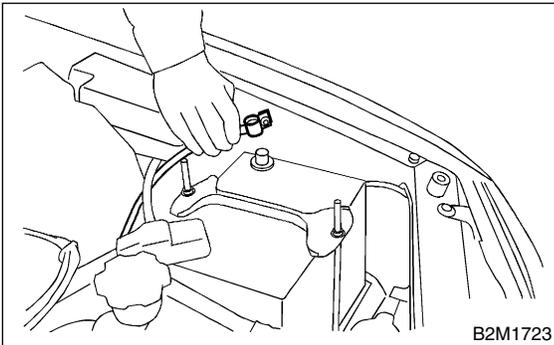


- 3) Lift-up the vehicle.
- 4) Remove canister. <Ref. to EC(H6)-7, REMOVAL, Canister.>
- 5) Disconnect connector from drain valve.

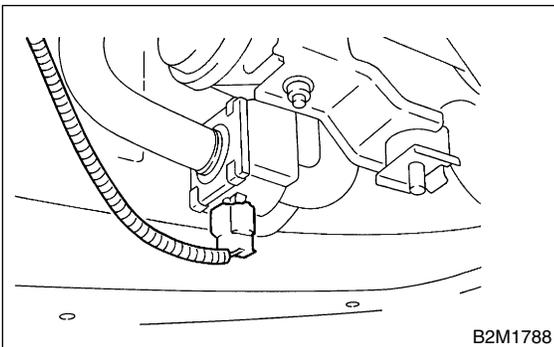

- 6) Remove bolt which installs air filter and drain valve brackets on body.

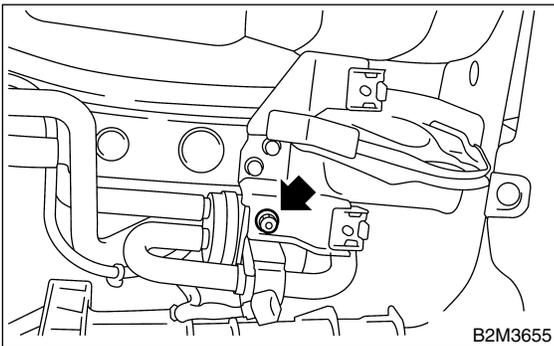


- 7) Disconnect evaporation hose (A) and remove drain valve (B).

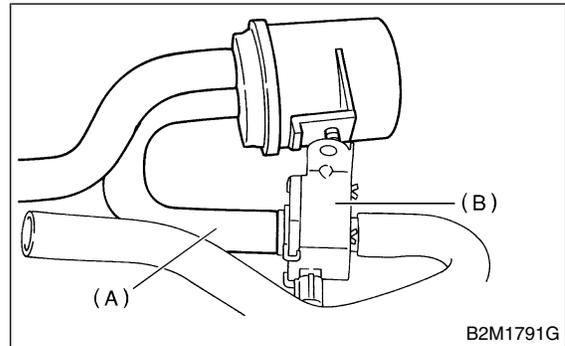

### B: INSTALLATION S140088A11

Install in the reverse order of removal.

**Tightening torque:**  
**18 N·m (1.8 kgf-m, 13.0 ft-lb)**

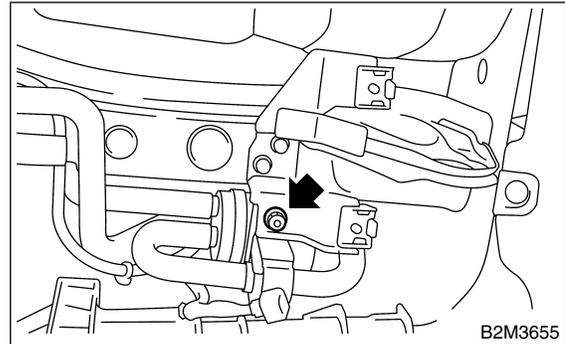

### C: INSPECTION S140088A10

- 1) Make sure that all hoses are installed correctly.
- 2) Make sure that hoses are not cracked or loose.