


4. Engine Coolant Temperature Sensor

S145047


A: REMOVAL

S145047A18

- 1) Disconnect battery ground cable.

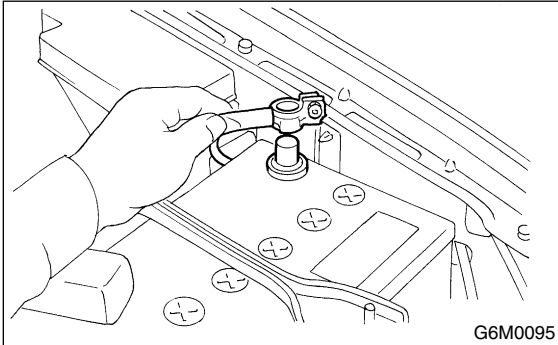

- 2) Disconnect connector from engine coolant temperature sensor.
- 3) Remove engine coolant temperature sensor.

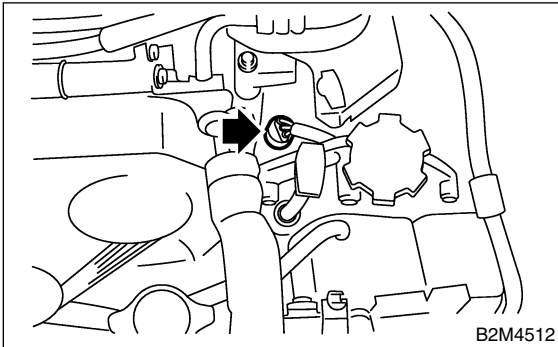

B: INSTALLATION

S145047A11

Install in the reverse order of removal.

Tightening torque:

16 N·m (0.16 kgf-m, 1.2 ft-lb)

