


10. Intake Air Temperature Sensor

S145569


A: REMOVAL

S145569A18

- 1) Disconnect battery ground cable.

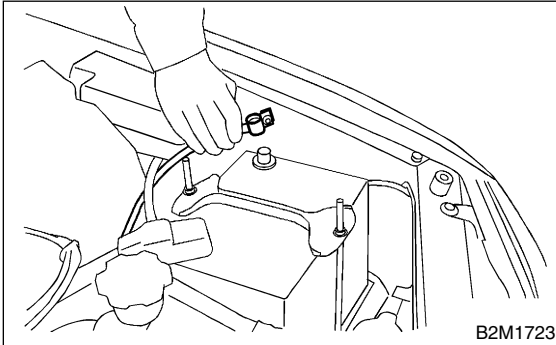

- 2) Disconnect connector from intake air temperature sensor.
- 3) Remove intake air temperature sensor from air intake chamber.

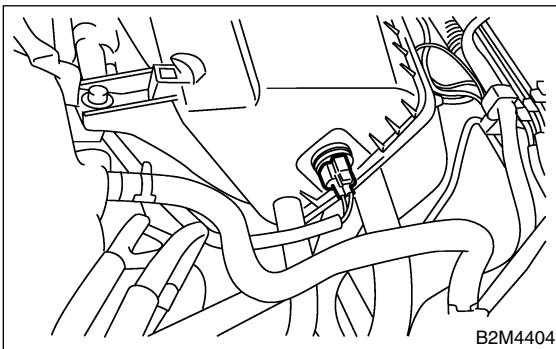

B: INSTALLATION

S145569A11

Install in the reverse order of removal.