

# INDUCTION VALVE CONTROL SOLENOID

Fuel Injection (Fuel Systems)

---


## 13. Induction Valve Control Solenoid

S145743

### A: REMOVAL

S145743A18

- 1) Disconnect battery ground cable.
- 2) Remove intake manifold.  
<Ref. to FU(H6)-17, REMOVAL, Intake Manifold.>
- 3) Disconnect connector from induction valve control solenoid.
- 4) Remove induction valve control solenoid from intake manifold.

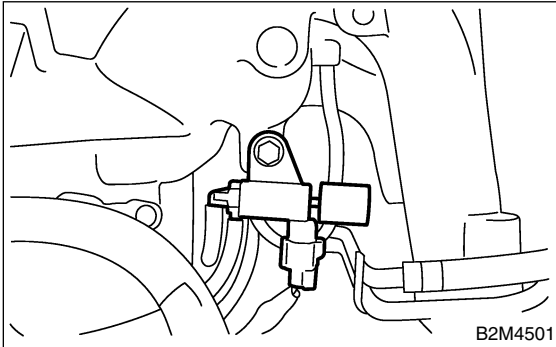

### B: INSTALLATION

S145743A11

Install in the reverse order of removal.

NOTE:

Always use a new gasket.

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14 ft-lb)**