

## 26. Fuel Filter S145027


### A: REMOVAL S145027A18

#### WARNING:

- Place “NO FIRE” signs near the working area.

- Be careful not to spill fuel on the floor.

- 1) Release fuel pressure. <Ref. to FU(H6)-50, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Disconnect fuel delivery hoses from fuel filter.

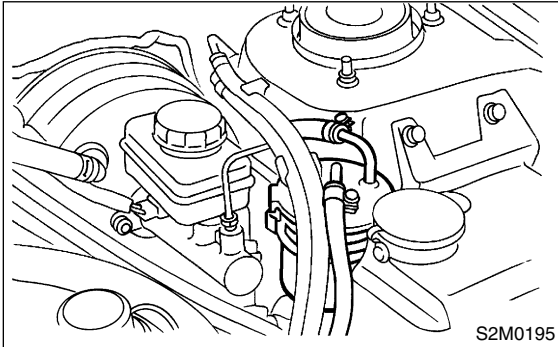

- 3) Remove filter from holder.

### B: INSTALLATION S145027A11


#### CAUTION:

- If fuel hoses are damaged at the connecting portion, replace it with a new one.
- If clamps are badly damaged, replace with new ones.

- 1) Install in the reverse order of removal.
- 2) Tighten hose clamp screws.

#### **Tightening torque:**

**1.0 N·m (0.1 kgf-m, 0.7 ft-lb)**

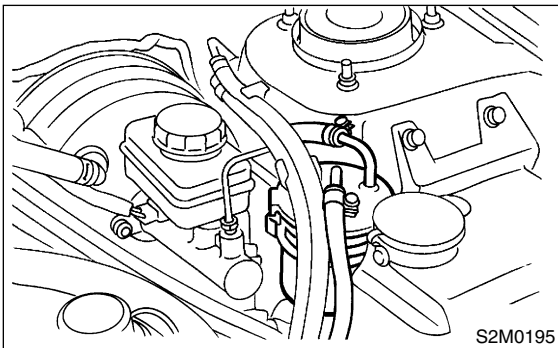

### C: INSPECTION S145027A10

- 1) Check the inside of fuel filter for dirt and water sediment.
- 2) If it is clogged, or if replacement interval has been reached, replace it.
- 3) If water is found in it, shake and expel the water from inlet port.