


## 4. Air Intake Duct S144566

### A: REMOVAL S144566A18

1) Remove bolts which install air intake duct on the front side of body.

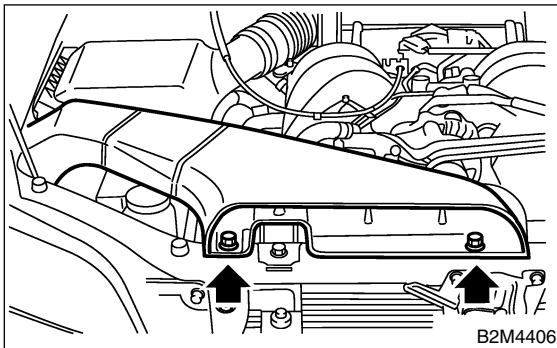

### B: INSTALLATION S144566A11

Install in the reverse order of removal.

#### **Tightening torque:**

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

### C: INSPECTION S144566A10

Inspect for cracks and loose connections. Check that no foreign objects are mixed in the air intake duct.