


## 4. Engine Oil Filter SA07585

### A: REPLACEMENT SA07585A20

#### 1. 2.5 L MODEL SA07585A2001

1) Remove oil filter with ST.

ST 498547000 OIL FILTER WRENCH

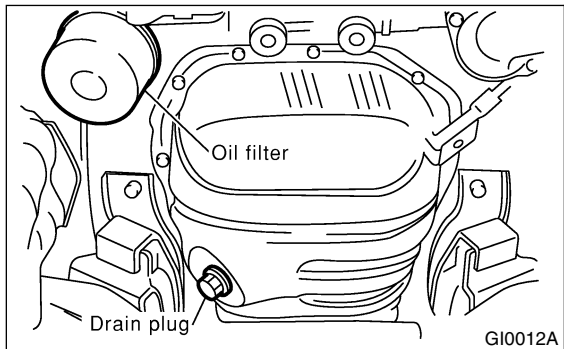

2) Get a new oil filter and apply a thin coat of engine oil to the seal rubber.

3) Install oil filter by turning it by hand, being careful not to damage seal rubber.

4) Tighten more (approximately 2/3 to 3/4 turn) after the seal rubber contacts the oil pump case. Do not tighten excessively, or oil may leak.

5) After installing oil filter, run engine and make sure that no oil is leaking around seal rubber.


**NOTE:**

The filter element and filter case are permanently joined; therefore, interior cleaning is not necessary.


6) Check the engine oil level. <Ref. to PM-5, REPLACEMENT, Engine Oil.>

#### 2. 3.0 L MODEL SA07585A2002

1) Drain engine oil by loosening engine oil drain plug.

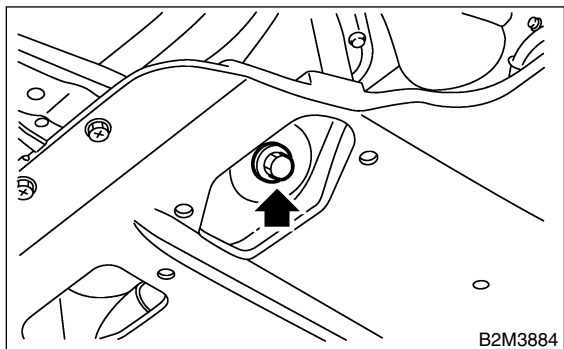


2) Remove access lid.

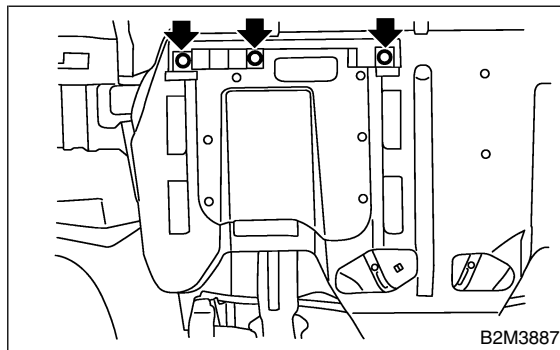

3) Remove oil filter with ST.

ST 498547000 OIL FILTER WRENCH

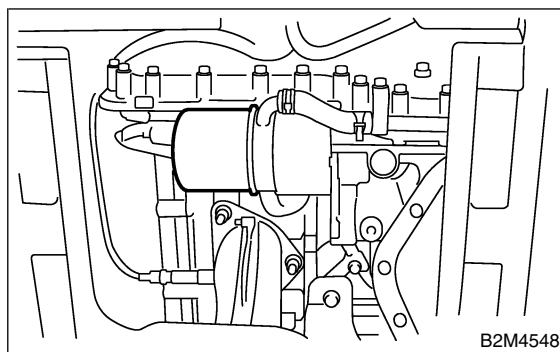

4) Get a new oil filter and apply a thin coat of engine oil to the rubber seal.

5) Install oil filter by turning it by hand, being careful not to damage rubber seal.

6) Tighten more (approximately 2/3 to 3/4 turn) after the rubber seal contacts the oil pump case. Do not tighten excessively, or oil may leak.

7) After installing oil filter, run engine and make sure that no oil is leaking around rubber seal.

**NOTE:**

The filter element and filter case are permanently joined; therefore, interior cleaning is not necessary.

8) Fill the engine oil. <Ref. to PM-5, REPLACEMENT, Engine Oil.>