
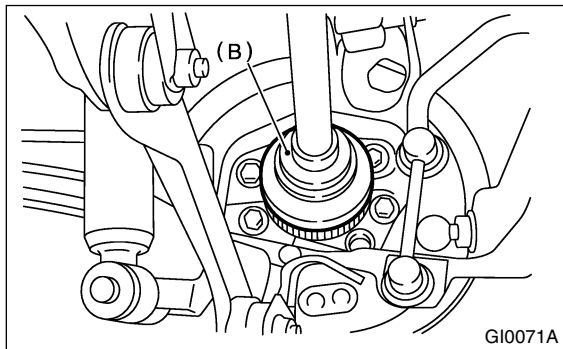


## 23. Axle Boots & Joints SA07699

### A: INSPECTION SA07699A10

#### 1. FRONT AND REAR AXLE BOOTS SA07699A1001

Inspect front axle boots (A) and rear axle boots (B) for deformation, damage or failure. If faulty, replace them with new ones. <Ref. to DS-26, Front Drive Shaft.> <Ref. to DS-31, Rear Drive Shaft.>

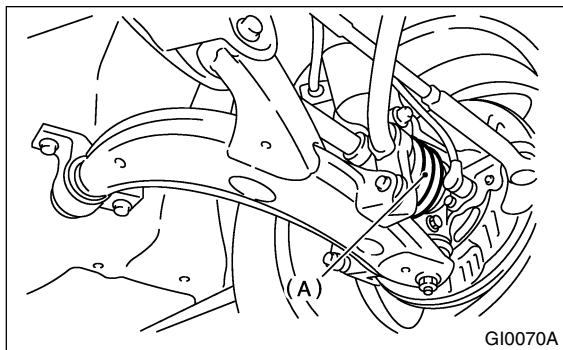

#### 2. PROPELLER SHAFT SA07699A1002

Inspect propeller shaft for damage or failure. If faulty, replace with a new one. <Ref. to DS-13, Propeller Shaft.>