


HEATER DUCT

HVAC System (Heater, Ventilator and A/C)

23. Heater Duct S701556

A: REMOVAL S701556A18

- 1) Remove heater unit. <Ref. to AC-25, REMOVAL, Heater Unit.>
- 2) Remove front seat. <Ref. to SE-7, REMOVAL, Front Seat.>
- 3) Remove front side sill cover.
- 4) Pull off floor mat to remove heater duct.

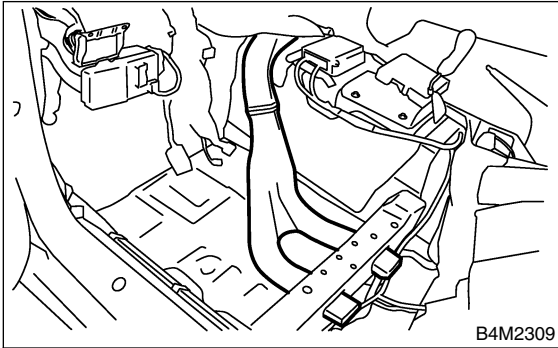

B: INSTALLATION S701556A11

Install in the reverse order of removal.