


## 17. Relay and Fuse S701287

### A: LOCATION S701287A13

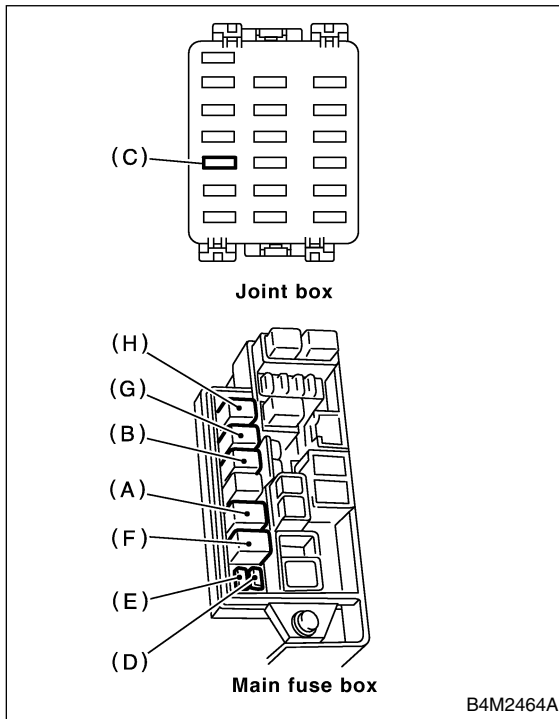


	4 cylinder engine model	6 cylinder engine model
Main fan relay	F	—
Sub fan relay	B	—
A/C relay	A	A
Main fan relay 1	—	F
Sub fan relay 1	—	G
Main fan relay 2	—	B
Sub fan relay 2	—	H
A/C fuse	C	C
Main fan fuse	E (20 A)	E (30 A)
Sub fan fuse	D (20 A)	D (30 A)

# RELAY AND FUSE

HVAC System (Heater, Ventilator and A/C)

## B: INSPECTION S701287A10

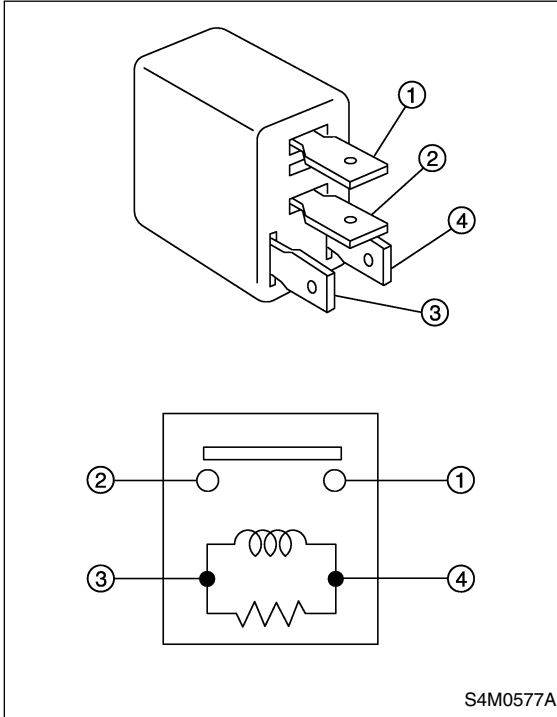

(3) — (4): Continuity exists.

(1) — (2): No continuity

While applying battery voltage to the cable between (3) and (4), check continuity between (1) and (2).

If no continuity exists, replace the relay with a new one.