

SUN-LOAD SENSOR (AUTO A/C)


HVAC System (Heater, Ventilator and A/C)

21. Sun-load Sensor (Auto A/C)


S701279

A: REMOVAL S701279A18

- 1) Disconnect ground cable from battery.
- 2) Insert a slot-type screwdriver to remove sun-load sensor.

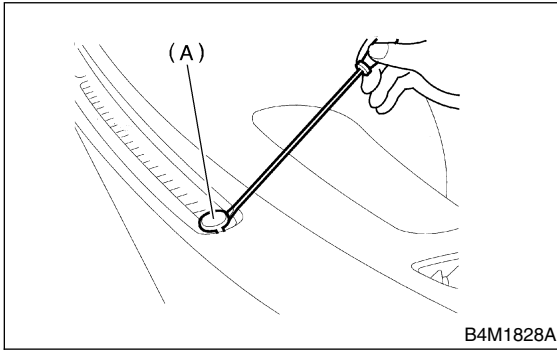

- 3) Disconnect sunload sensor connector.

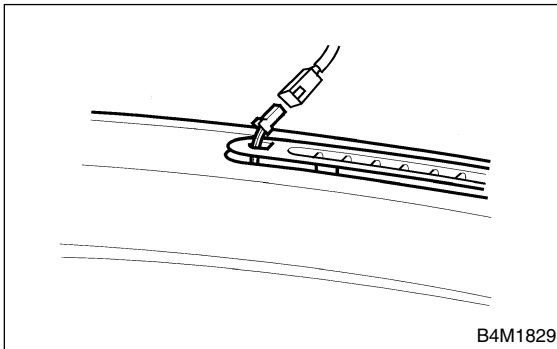

CAUTION:

Be careful not to damage sensors and interior trims when removing them.

B: INSTALLATION S701279A11

Install in the reverse order of removal.

C: INSPECTION S701279A10

<Ref. to AC-32, TROUBLE CODE 25 OR -25 (SUNLOAD SENSOR), Diagnostic Procedure with Trouble Code.>