


SENSORS AND SWITCHES

Fuel Injection (Fuel System)

4. Sensors and Switches

A: FRONT OXYGEN (A/F) SENSOR

- The front oxygen sensor uses zirconium oxide (ZrO_2) which is a solid electrolyte, at portions exposed to exhaust gas.
- The zirconium oxide has the property of generating electromotive force when its both sides are exposed to oxygen ions of different concentration and the magnitude of this electromotive force depends on how much the difference is.
- The front oxygen sensor detects the amount of oxygen in exhaust gases by making use of this property of the zirconium oxide material.
- The zirconium oxide material is formed into a closed end tube and its external surface is exposed to exhaust gases with smaller oxygen ion concentration, whereas its internal surface is exposed to atmospheric air. The external surface has a porous platinum coating. The sensor housing is grounded to the exhaust pipe and the inside is connected to the ECM through the harness to be able to use the current output from the sensor.
- The sensor incorporates a ceramic heater to improve its performance at low temperatures.

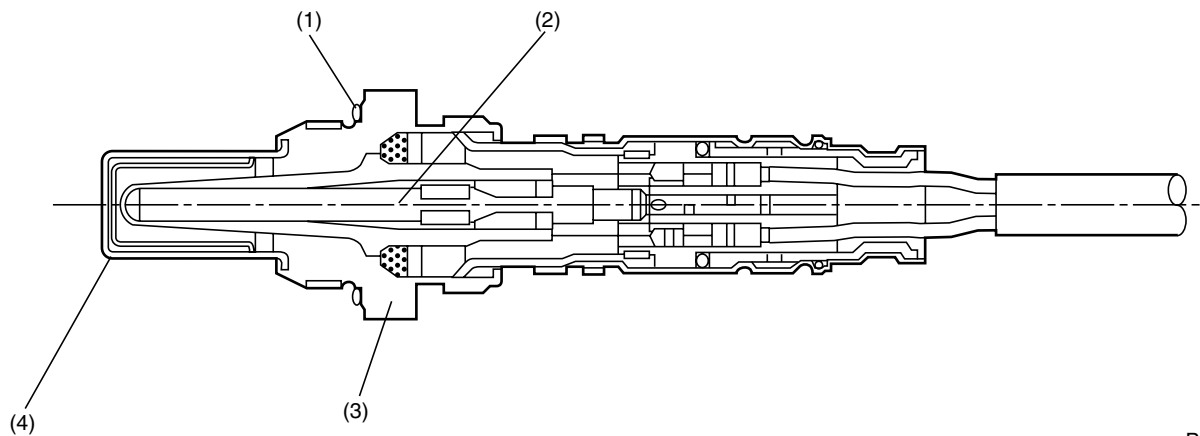

B2H3910B



- (1) Gasket
- (2) Ceramic heater
- (3) Sensor housing
- (4) Protection tube

FU-15

SENSORS AND SWITCHES

Fuel Injection (Fuel System)

- When rich air-fuel mixture is burnt in the cylinder, the oxygen in the exhaust gases is almost completely used in the catalytic reaction by the platinum coating on the external surface of the zirconia tube. This results in a very large difference in the oxygen ion concentration between the inside and outside of the tube, and the electromotive force generated is large.
- When a lean air-fuel mixture is burnt in the cylinder, relatively large amount of oxygen remains in the exhaust gases even after the catalytic action, and this results in a small difference in the oxygen ion concentration between the tube's internal and external surfaces. The electromotive force in this case is very small.
- The difference in oxygen concentration changes drastically in the vicinity of the stoichiometric air-fuel ratio, and hence the change in the electromotive force is also large. By using this information, the ECM can determine the air-fuel ratio of the supplied mixture easily. The front oxygen sensor does not generate much electromotive force when the temperature is low. The output characteristics of the sensor stabilize at a temperature of approximately 700°C (1,292°F).

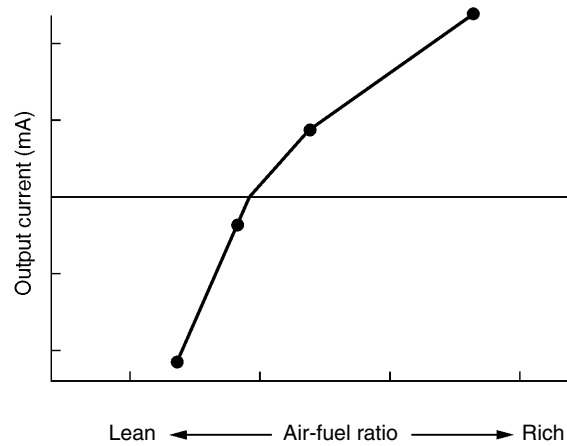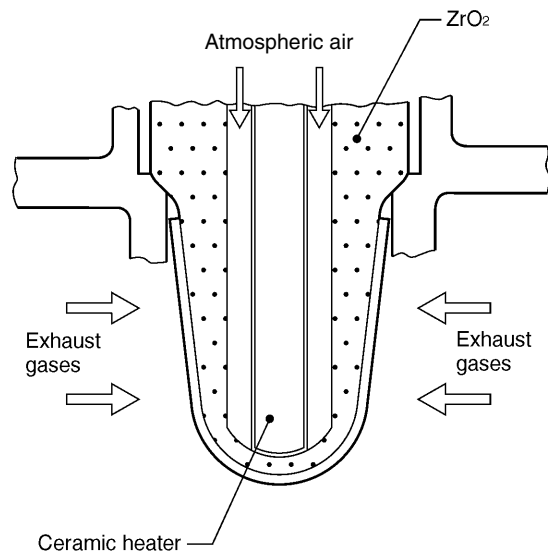

B2H2006B


FU-16

SENSORS AND SWITCHES

Fuel Injection (Fuel System)

B: REAR OXYGEN SENSOR

- The rear oxygen sensor is used to sense oxygen concentration in the exhaust gas. If the air-fuel ratio is leaner than the stoichiometric ratio in the mixture (i.e., excessive amount of air), the exhaust gas contains more oxygen. To the contrary, if the fuel ratio is richer than the stoichiometric ratio, the exhaust gas contains almost no oxygen.
- Detecting the oxygen concentration in exhaust gas using the oxygen sensor makes it possible to determine whether the air-fuel ratio is leaner or richer than the stoichiometry.
- The rear oxygen sensor has a zirconia tube (ceramic) which generates voltage if there is a difference in oxygen ion concentration between the inside and outside of the tube. Platinum is coated on the inside and outside of the zirconia tube as a catalysis and electrode material. The sensor housing is grounded to the exhaust pipe and the inside is connected to the ECM through the harness.
- A ceramic heater is employed to improve performance at low temperatures.

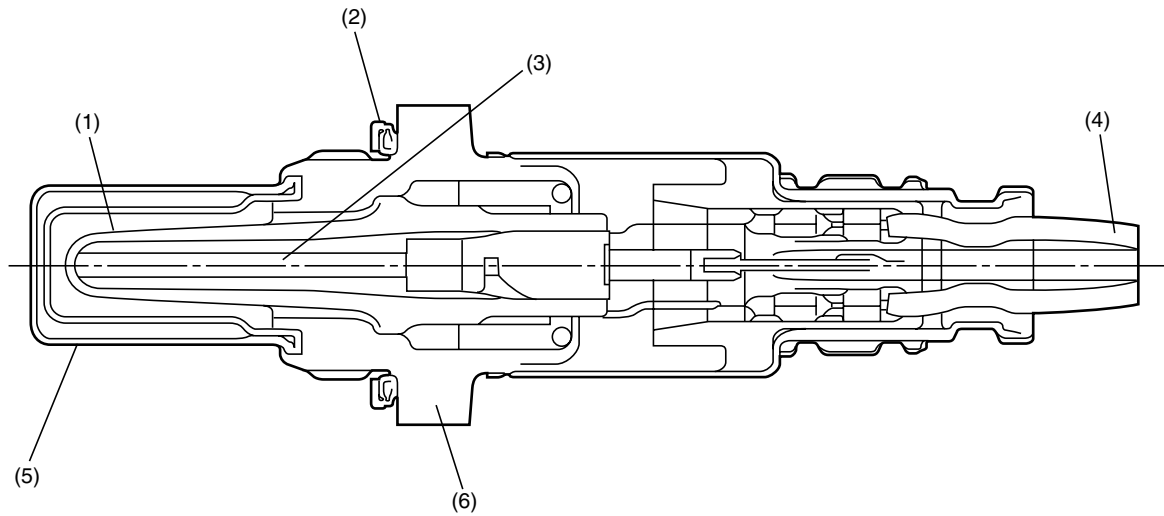

B2H4156B



- | | |
|--------------------|---------------------|
| (1) Zirconia tube | (4) Harness |
| (2) Gasket | (5) Protection tube |
| (3) Ceramic heater | (6) Sensor housing |

FU-17

SENSORS AND SWITCHES

Fuel Injection (Fuel System)



- When rich air-fuel mixture is burnt in the cylinder, the oxygen in the exhaust gases is almost completely used in the catalytic reaction by the platinum coating on the external surface of the zirconia tube. This results in a very large difference in the oxygen ion concentration between the inside and outside of the tube, and the electromotive force generated is large.
- When a lean air-fuel mixture is burnt in the cylinder, relatively large amount of oxygen remains in the exhaust gases even after the catalytic action, and this results in a small difference in the oxygen ion concentration between the tube's internal and external surfaces. The electromotive force in this case is very small.
- The difference in oxygen concentration changes drastically in the vicinity of the stoichiometric air-fuel ratio, and hence the change in the electromotive force is also large. By using this information, the ECM can determine the air-fuel ratio of the supplied mixture easily. The rear oxygen sensor does not generate much electromotive force when the temperature is low. The output characteristics of the sensor stabilize at a temperature of approximately 300 to 400°C (572 to 752°F).

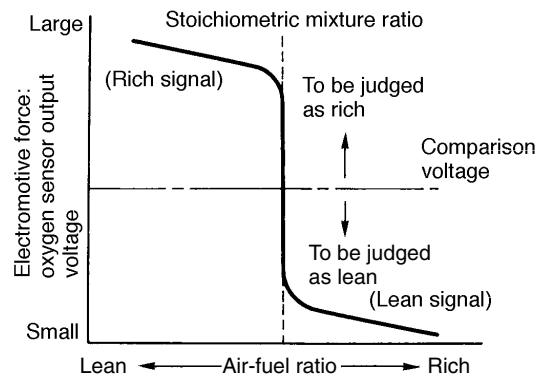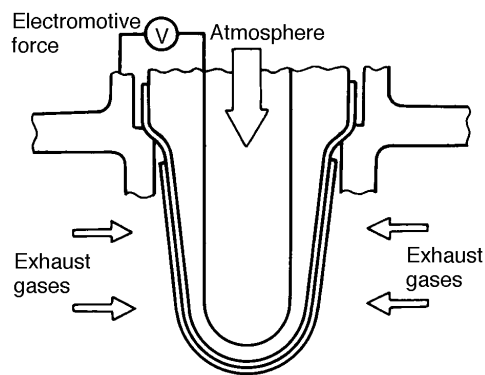

G2H0038B

C: ENGINE COOLANT TEMPERATURE SENSOR

The engine coolant temperature sensor is located on the engine coolant pipe. The sensor uses a thermistor whose resistance changes inversely with temperature. Resistance signals as engine coolant temperature information are transmitted to the ECM to make fuel injection, ignition timing, purge control solenoid valve and other controls.

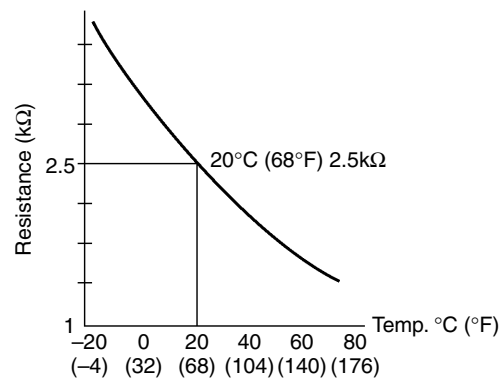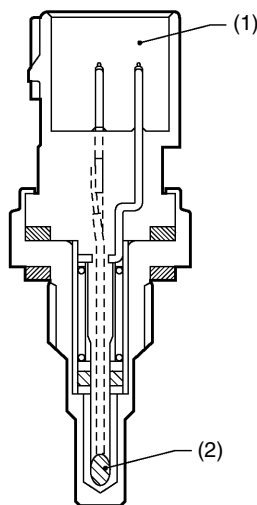

S2H1113B

- (1) Connector
- (2) Thermistor element


FU-18

SENSORS AND SWITCHES

Fuel Injection (Fuel System)

D: CRANKSHAFT POSITION SENSOR

- The crankshaft position sensor is installed on the rear end of the cylinder block. The sensor generates a pulse when one of the teeth on the perimeter of the crankshaft plate (rotating together with the crankshaft) passes in front of it. The ECM determines the crankshaft angular position by counting the number of pulses.
- As the crankshaft rotates, each tooth of the crankshaft plate aligns with the crankshaft position sensor so that the magnetic flux in the sensor's coil changes since the air gap between the sensor pickup and the crankshaft plate changes. This change in magnetic flux induces a voltage pulse in the sensor and the pulse is transmitted to the ECM.

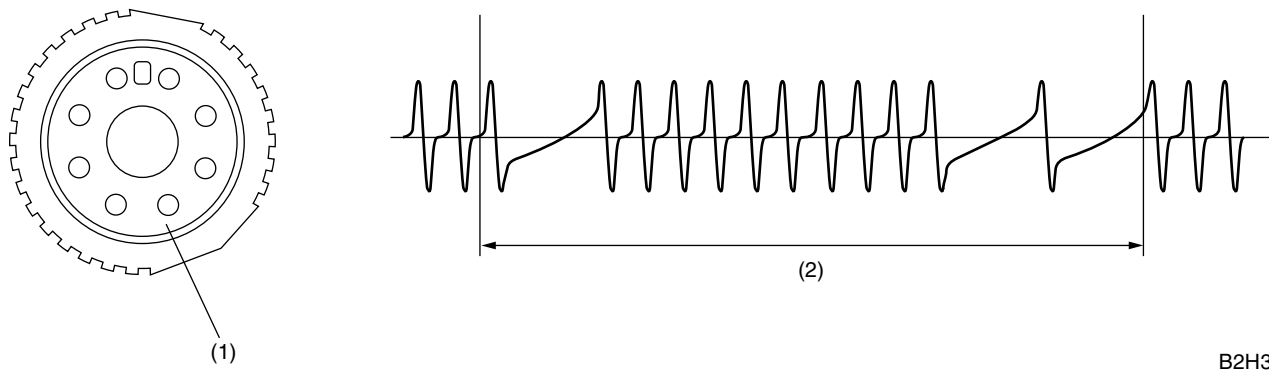

B2H3912B

- (1) Crankshaft plate
(2) Crankshaft half rotation


FU-19

SENSORS AND SWITCHES

Fuel Injection (Fuel System)

E: CAMSHAFT POSITION SENSOR

- The camshaft position sensor is located on the right-hand cylinder head. It detects the combustion cylinder at any given moment.
- The sensor generates a pulse when one of the slots on the back of the right-hand camshaft plate passes in front of the sensor. The ECM detects the camshaft position by measuring the pulse. Three slots are provided on the plate as shown below.

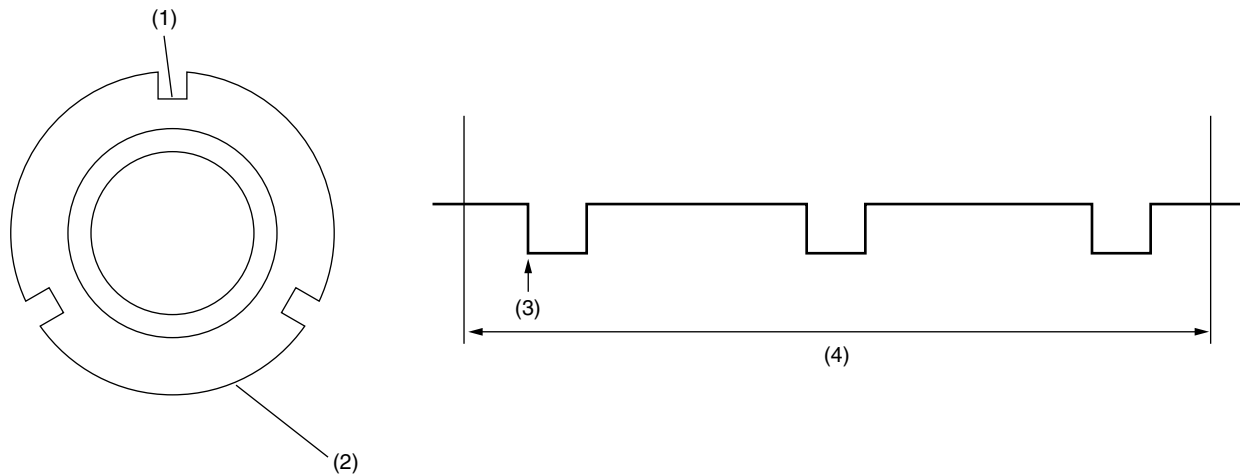

B2H3913B

- (1) Slot
- (2) Camshaft plate
- (3) Detection point
- (4) Camshaft one rotation (Crankshaft two rotations)


FU-20

SENSORS AND SWITCHES

Fuel Injection (Fuel System)

F: KNOCK SENSOR

- The knock sensor is installed on the cylinder block, and senses knocking that occurs in the engine.
- The sensor is a piezo-electric type which converts vibration resulting from knocking into electric signals.
- In addition to a piezo-electric element, the sensor has a weight and case as its components. If knocking occurs in the engine, the weight in the case moves causing the piezo-electric element to generate a voltage.
- The knock sensor harness is connected to the bulkhead harness.

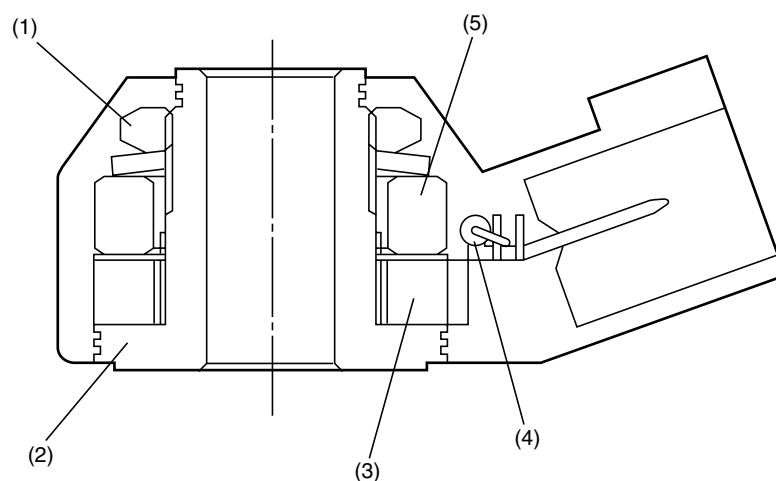

B2H4157B

- (1) Nut
- (2) Housing
- (3) Piezo-electric element
- (4) Resistor
- (5) Weight


FU-21

SENSORS AND SWITCHES

Fuel Injection (Fuel System)

G: VEHICLE SPEED SENSOR

- The vehicle speed sensor is mounted on the transmission.
- The vehicle speed sensor generates a 16-pulse signal for every rotation of the front differential and send it to the transmission control module (TCM). The signal sent to the TCM is converted there into a 4-pulse signal, and then sent to the ECM and the combination meter.

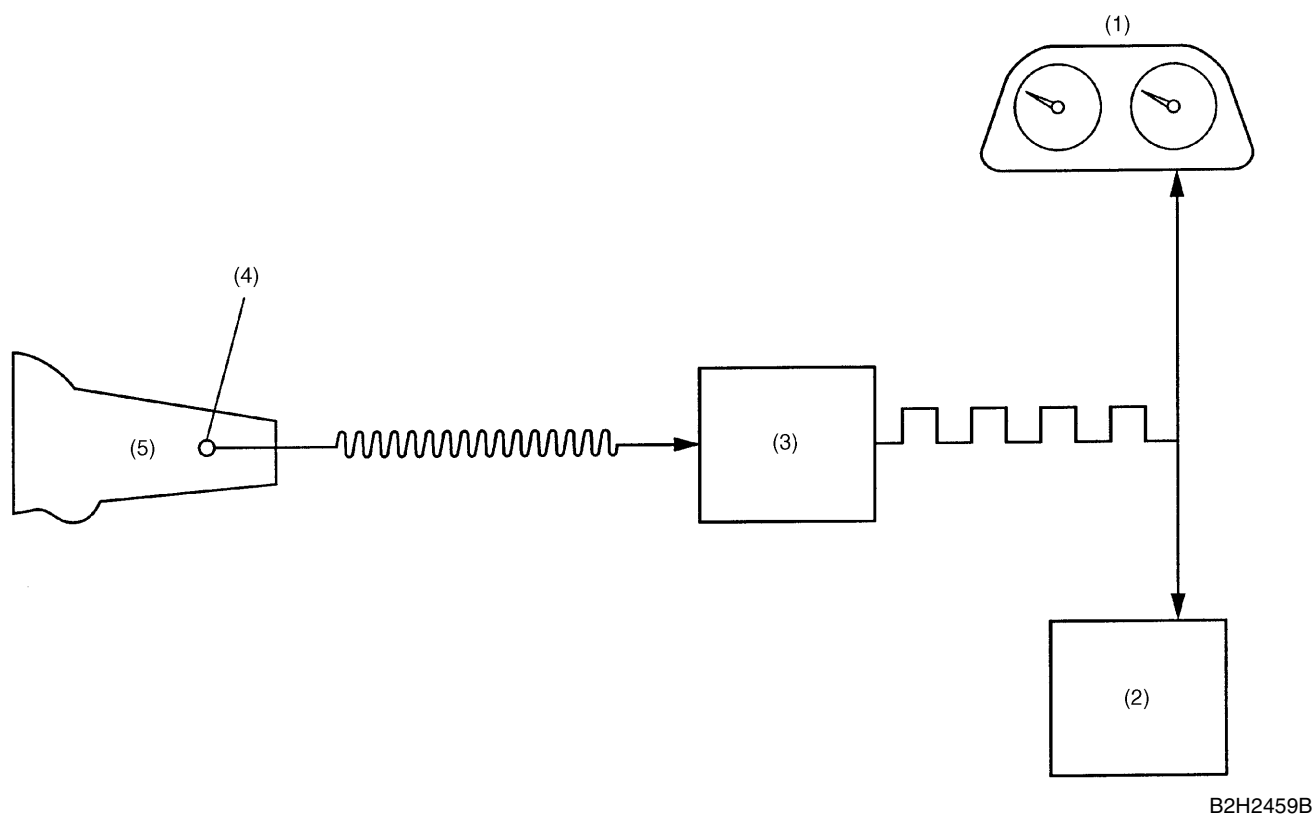

- (1) Combination meter
- (2) ECM
- (3) TCM
- (4) Vehicle speed sensor
- (5) Transmission

FU-22