

## KEYLESS ENTRY SYSTEM

Security and Locks

### 3. Keyless Entry System

#### A: CONSTRUCTION

- The keyless entry system consists of a transmitter, keyless entry control module (with a built-in antenna), door lock actuators, door switches, horn and interior light.
- The keyless entry system operates on a radio frequency, so its transmitter can be used in almost all directions relative to the vehicle.

#### B: FUNCTION

##### 1. DOOR LOCKING

- 1) Push the transmitter's LOCK button once.
- 2) All doors are locked.
- 3) Check that the horn chirps once.

##### 2. DOOR UNLOCKING (DRIVER'S DOOR)

- 1) Push the transmitter's UNLOCK button once.
- 2) The driver's door is unlocked, the ignition switch illumination turns ON and the interior light turns ON (when the interior light switch is set at the middle position).

#### NOTE:

The interior light illuminates for 30 seconds, then gradually dims and goes out in 4 seconds, while the ignition switch illumination illuminates for 30 seconds and then goes out without dimming.

If the key is inserted in the ignition switch before the interior light and ignition switch illumination go out, door locking operation is performed or the panic alarm is activated and the following will result.

- The ignition switch illumination will go out immediately.
- The interior light will dim gradually and go out in 4 seconds.

If any door is opened and then closed during the 30-second period, the following will occur.

- The ignition switch illumination will illuminate for 4 seconds and then go out.
- The interior light will illuminate for 4 seconds, then dim gradually and go out in 4 seconds.

- 3) Check that the horn chirps twice.

##### 3. DOOR UNLOCKING (ALL DOORS)

- 1) Push the transmitter's UNLOCK button twice.
- 2) All doors are unlocked.
- 3) No audible or visible sign is given even after all the doors are unlocked.

##### 4. PANIC ALARM SETTING

- 1) Push the transmitter's LOCK button for more than 2 seconds.
- 2) The horn sounds continuously. To stop the horn, push any transmitter's button.

SL-4

## KEYLESS ENTRY SYSTEM

Security and Locks

### 5. ANSWER BACK (HORN SIGNALING) ON/OFF SELECTION

- 1) Push the transmitter's UNLOCK button.
- 2) Push the transmitter's LOCK and UNLOCK buttons simultaneously for more than 2 seconds to activate the answer back function and push them again to deactivate it.
- 3) When the answer back function is activated, the horn will sound once. When it is deactivated, the horn will sound twice.

### 6. DOOR OPEN WARNING FUNCTION

- The horn sounds three times if the transmitter's LOCK button is pressed with any door, rear gate or trunk lid opened.

SL-5