

6. Side Airbag Module S802311

A: REMOVAL S802311A18

CAUTION:

- Refer to “CAUTION” in General Description before handling the airbag module. <Ref. to AB-3, CAUTION, General Description.>
- The side airbag module cannot be detached from the front seat assembly.
- When replacing side airbag module, replace front seat assembly.
<Ref. to SE-7, REMOVAL, Front Seat.>

B: INSTALLATION S802311A11

<Ref. to SE-8, INSTALLATION, Front Seat.>

C: INSPECTION S802311A10

CAUTION:

Refer to “CAUTION” in General Description before handling the airbag module. <Ref. to AB-3, CAUTION, General Description.>

Check for the following, and replace front seat assembly.

- Front seat is deformed or damaged.
- Harness and/or connector is cracked, deformed or open.
- Load wire is exposed.