


## 10. Helper S201539

### A: REMOVAL S201539A18

- 1) Jack-up the rear part of the vehicle, support it with safety stands (rigid racks).
  - 2) Using ST, remove helper.
- ST 20099AE030 HELPER SOCKET WRENCH

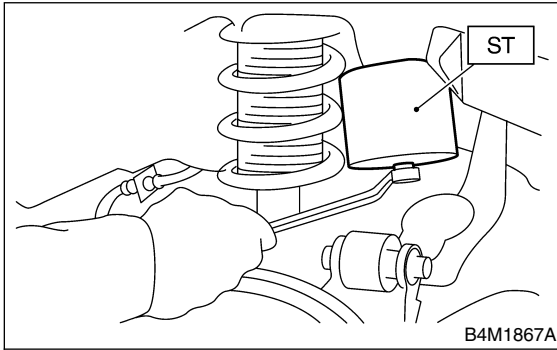

### B: INSTALLATION S201539A11

Install in the reverse order of removal.

#### ***Tightening torque:***

***30 N·m (3.1 kgf·m, 22 ft·lb)***

### C: INSPECTION S201539A10

Check helper for cracks, fatigue or damage.